

**Safety Information**

**IMPORTANT SAFETY INSTRUCTIONS**

When using electrical products, basic precautions should always be followed, including the following:

- a. **READ AND FOLLOW ALL SAFETY INSTRUCTIONS.**
- b. This product is for indoor use only.
- c. This seasonal product is not intended for permanent installation or use.
- d. Do not mount or place the product near gas or electric heaters, fireplaces, candles, or other similar sources of heat.
- e. Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails.
- f. Do not let lamps rest on the supply cord or on any wire.
- g. Unplug the product when leaving the house, when retiring for the night, or if left unattended.
- h. This is an electric product and not a toy! To avoid risk of fire, burns, personal injury and electric shock it should not be played with or placed where small children can reach it.
- i. Do not use this product for other than its intended use.
- j. Do not hang ornaments or other objects from cord, wire, or light string.
- k. Do not close doors or windows on the product or extensions cords as this may damage the wire insulation.
- l. Do not cover the product with cloth, paper, or any material that is not a part of the product when in use.
- m. Read and follow all instructions that are on the product or provided with the product.

**n. SAVE THESE INSTRUCTIONS**

**Pre-Assembly**

 
**Package Contents**

Part	Description	Quantity
A	Tree top, tag 3	1
B	Tree center, tag 2	1
C	Tree bottom, tag 1	1
D	Tree stand	1

**Assembly**


**Assembling the tree stand**

- Step 1. Before you start to assemble your tree, choose an appropriate location near a wall outlet.
- Step 2. Assemble the tree stand and place on a level surface.



**Assembling the tree**

- Step 1. Remove the protective caps from the tree bottom (C) and insert the pole into the tree stand (D).
- Step 2. Remove the protective caps from the tree center (B) and insert the pole into the tree bottom (C).
- Step 3. Insert the tree top (A) into the tree center (B).
- Step 4. Shape the branches to your preference by working from the bottom to the top. When adjusting branches, ensure that all wires are free of branch hinges.
- Step 5. Connect the plug(s) securely to the extension cord(s) as per the color labels indicated in attached photo and insert the green label extension cord plug into the wall outlet.
- Step 6. When finished shaping the branches, slightly upsweep all branch tips for a uniform look.

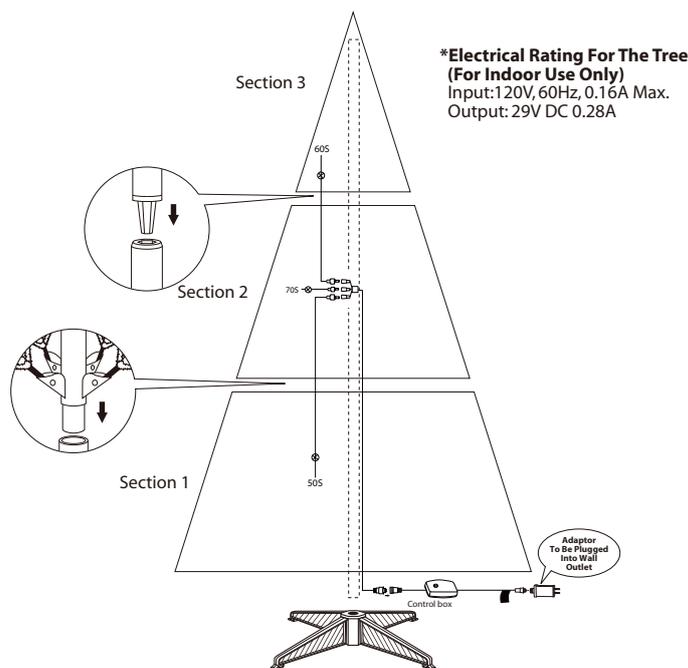

**Operation**

**Turning on the tree**

NOTE: If some bulbs do not light or flicker, search for any loose plugs and/or broken, loose, or missing bulbs. Replace bulbs promptly with the replacement bulbs provided in order to maintain the performance and life expectancy of your tree.

- Step 1. Connect the light strings of the tree together and plug the power cord into a wall outlet.
- Step 2. If the tree comes with a foot pedal, step on the On/Off button.

**Maintenance**

**Spare parts**

This tree package includes hinge pins, washers, fuse and bulbs for any replacement or repair that you need to perform on your tree. If extra parts are needed, contact the Customer Service Team at 1-877-527-0313 between the hours of 8 am and 5 pm EST, Monday through Friday.

**Repairing Loose Hinges**

- Step 1. Place the branch into the slot of the bracket
- Step 2. Insert a new hinge pin through the holes of the bracket and secure with a washer.

**Care and Cleaning**


- Step 1. Remove all ornaments and decorations.
- Step 2. Unplug the cord from the wall and then unplug each section of the tree.
- Step 3. Gently lift the tree top straight up to remove from the center section and fold all branches towards the pole.
- Step 4. Repeat this step for the bottom tree section.
- Step 5. Carefully place all tree sections into a shipping box and tape it shut.
- Step 6. Store your tree in a cool, dry place away from sunlight.

**User servicing instructions**

**HOW TO USE THE DUAL COLOR LIGHT CONTROLLER AND REMOTE CONTROL:**

- Press the selector button on the "Dual Color Light Controller" or "Remote Controller" to select among:
- (1) CLEAR AND MULTI-COLOR ALTERNATING;
  - (2) CLEAR LIGHTS;
  - (3) MULTI LIGHTS;
  - (4) TURN OFF BOTH LIGHTS.

Note: For the remote controller, replace only with CR2032 battery. See bottom of the remote controller for replacement instruction.

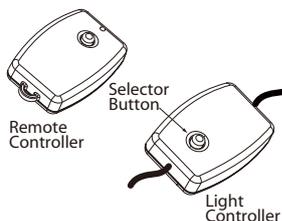

**CAUTION:** Do Not Mix Old And New Batteries. Do not mix alkaline, carbon-zinc, lithium, or re-chargeable (Nickel-Cadmium or other types) batteries. Use only batteries of the same or equivalent type as recommended. Remove all batteries when replacing. Do not dispose of batteries in fire. Batteries may explode or leak. Batteries are to be inserted with the correct polarity. Exhausted batteries are to be removed from the toy. The supply terminals are not to be short-circuited. Do not dispose of this product as unsorted municipal waste. Collection of such waste separately for special treatment is necessary. Do not ingest batteries. Keep away from children.

**CAUTION:** Use only power adaptor that was provided with this product. Using a different power adaptor will damage the lights and cause fire, electrical shock hazard.

### Troubleshooting

Problem	Solution
The tree does not light	Ensure that all tree sections are plugged into each other and that the tree is plugged into the wall. If your tree came with a foot pedal, step on the On/Off button.
	Check for blown fuses at the power cord plug. Replace as needed with the replacement fuses provided.
	Check for loose, broken, or missing bulbs and replace as needed with the replacement bulbs provided