

Safety Information

IMPORTANT SAFETY INSTRUCTIONS

When using electrical products, basic precautions should always be followed, including the following:

- a. **READ AND FOLLOW ALL SAFETY INSTRUCTIONS.**
- b. This product is for Outdoor covered use.
- c. This seasonal product is not intended for permanent installation or use.
- d. Do not mount or place the product near gas or electric heaters, fireplaces, candles, or other similar sources of heat.
- e. Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails.
- f. Do not let lamps rest on the supply cord or on any wire.
- g. Unplug the product when leaving the house, when retiring for the night, or if left unattended.
- h. This is an electric product and not a toy! To avoid risk of fire, burns, personal injury and electric shock it should not be played with or placed where small children can reach it.
- i. Do not use this product for other than its intended use.
- j. Do not hang ornaments or other objects from cord, wire, or light string.
- k. Do not close doors or windows on the product or extensions cords as this may damage the wire insulation.
- l. Do not cover the product with cloth, paper, or any material that is not a part of the product when in use.
- m. Read and follow all instructions that are on the product or provided with the product.

n. SAVE THESE INSTRUCTIONS

USER SERVICING INSTRUCTIONS

LAMP REPLACEMENT

 
Step 1 Grasp the power adapter or power cord plug, and then unplug from the power outlet. Do not pull the power cord.

Step 2 Lift up lamp lock tab, then pull the lamp and plastic lamp base straight out of the lamp-holder.



Step 3 Replace with a new spare lamp provided with this product.

(Reference figure only)



Pre-Assembly

Package Contents


Part	Description	Quantity
A	Tree top, tag 2	1
B	Tree body, tag 1	1
C	Tree pot	1

Assembly

Assembling the tree

- Step 1** Choose a location near a wall outlet.
- Step 2** Insert tree body (B) into the weighted pot (C).
- Step 3** Insert the tree top(A) into the trunk of the main body(B).
- Step 4** Shape the branches. Shift branches to fill any gaps, lightly upsweep all branch tips for a uniform look. Your tree is now ready to decorate.

Step 5 Connect the plug(s) securely to the extension cord(s) as per the color labels indicated in attached photo and insert the green label extension cord plug into the wall outlet.

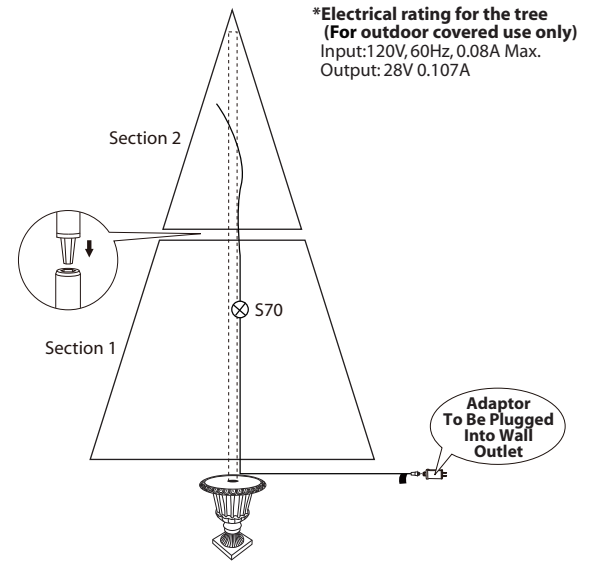

***Electrical rating for the tree (For outdoor covered use only)**
Input: 120V, 60Hz, 0.08A Max.
Output: 28V 0.107A

Operation

Turning on the tree

NOTE: If some bulbs do not light or flicker, search for any loose plugs and/or broken, loose, or missing bulbs. Replace bulbs promptly with the replacement bulbs provided in order to maintain the performance and life expectancy of your tree. Connect the light strings of the tree together and plug the power cord into a wall outlet.

Maintenance

Spare parts

This tree package includes bulbs for any replacement or repair that you need to perform on your tree. If extra parts are needed, contact the Customer Service Team at 1-877-527-0313 between the hours of 8 am and 5 pm EST, Monday through Friday.

Care and Cleaning

- Step 1** Remove all ornaments and decorations.
- Step 2** Unplug the cord from the wall and then unplug each section of the tree.
- Step 3** Gently lift the tree top straight up to remove from the body section and fold all branches towards the pole.
- Step 4** Repeat this step for the body section.
- Step 5** Carefully place all tree sections into a shipping box and tape it shut.
- Step 6** Do not store tree in a damp area or in an area where the temperature exceeds 100° F.

Troubleshooting

Problem	Solution
The tree does not light	Ensure that all tree sections are plugged into each other and that the tree is plugged into the wall.
	Check for loose, broken, or missing replace as needed with the replacement bulbs provided