

TREE ASSEMBLY INSTRUCTIONS

Congratulations on purchasing your new tree from **Polygroup®!** Carefully follow the instructions below on how to quickly and easily set up your new tree.

Safety Information

IMPORTANT SAFETY INSTRUCTIONS

When using electrical products, basic precautions should always be followed, including the following:

- a. **READ AND FOLLOW ALL SAFETY INSTRUCTIONS.**
- b. Do not use seasonal products outdoors unless marked suitable for indoor and outdoor use. When products are used in outdoor applications, connect the product to a Ground Fault Circuit Interrupting (GFCI) outlet. If one is not provided, contact a qualified electrician for proper installation.
- c. This seasonal product is not intended for permanent installation or use.
- d. Do not mount or place the product near gas or electric heaters, fireplaces, candles, or other similar sources of heat.
- e. Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails.
- f. Do not let lamps rest on the supply cord or on any wire.
- g. Unplug the product when leaving the house, or when retiring for the night, or if left unattended.
- h. This is an electric product – not a toy! To avoid risk of fire, burns, personal injury and electric shock it should not be played with or placed where small children can reach it.
- i. Do not use this product for other than its intended use.
- j. Do not hang ornaments or other objects from cord, wire, or light string.
- k. Do not close doors or windows on the product or extensions cords as this may damage the wire insulation.
- l. Do not cover the product with cloth, paper, or any material that is not a part of the product when in use.
- m. The supply cord cannot be replaced. If the cord is damaged the product should be scrapped.
- n. The lamps of this product are not replaceable. Do not attempt to change or modify the lamps.
- o. For LED string only. To reduce the risk of fire or electric shock, do not attempt to replace lamps or modify string.
- p. Read and follow all instructions that are on the product or provide with the product.

SAVE THESE INSTRUCTIONS.

Pre-Assembly


Package Contents

Part	Description	Quantity
A	Tree Top	1
B	Tree Center, Sticker 2	1
C	Tree Bottom, Sticker 1	1
D	Tree Stand	1

Assembly

Assembling the tree stand

- Step 1.** Choose a location near a wall outlet.
- Step 2.** Unfold the legs of the tree stand (D) and lay the stand on the floor.
- Step 3.** Slide the locking disk of the tree stand (D) down until it snaps into place.

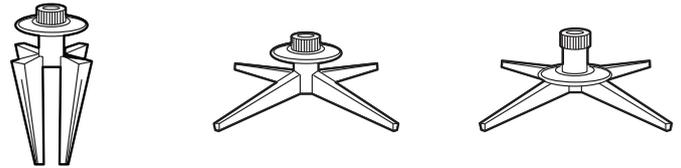

Assembling the tree


This tree comes with Quick Set™ technology - set up and light up your tree in less than 10 minutes!

- Step 1.** Remove the protective caps from the tree bottom (C) and insert the pole into the tree stand (D).
- Step 2.** Remove the protective caps from the tree center (B) and insert the pole into the tree bottom (C).
- Step 3.** Insert the tree top (A) into the tree center (B).
- Step 4.** Shape the branches to your preference by working from the bottom to the top. When adjusting branches, ensure that all wires are free of branch hinges.
- Step 5.** Plug the adaptor into the wall outlet. All your lights should now be lit.
- Step 6.** Shape the tree from the bottom to the top. Start with the branches farthest from the pole – fan out in a star shape, and continue until the entire tree is shaped.



- Step 7.** When finished shaping the branches, slightly upsweep all branch tips for a uniform look.

***Electrical Rating For The Tree (For Indoor Use Only)**
 Input: 120V, 60Hz, 0.83A Max.
 Output: 24V DC 2A

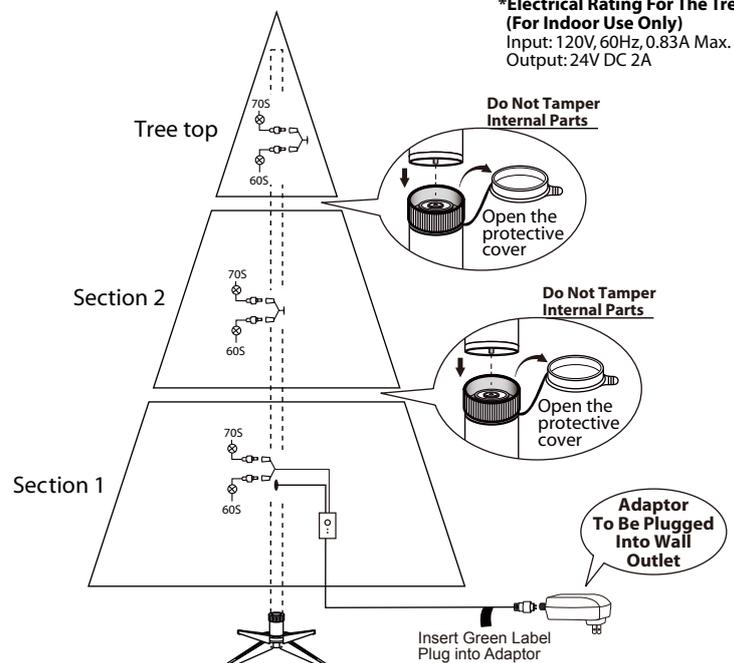

Maintenance

Spare parts

For any questions, assistance, or missing parts, **Do Not Return To Place Of Purchase.** Please contact us at 1-888-919-0070 or visit our website at www.polygroupstore.com. One of our customer service representatives will be happy to assist you.

Repairing Loose Hinges

- Step 1.** Place the branch into the slot of the bracket.
- Step 2.** Insert a new hinge pin through the holes of the bracket and secure with a washer.

Use and Care Instructions

1. Before using or reusing, inspect product carefully. Discard any products that have cut, damaged or frayed wire insulation or cords, cracks in the lampholders or enclosures, loose connections, or exposed copper wire.
2. Before disassembling the tree, unplug the tree and remove all ornaments and decorations.
3. Gently lift the tree top straight up to remove from the center section and fold all branches towards the pole.
4. Repeat this step for the center and bottom tree sections.
5. When storing the product, carefully remove the product from wherever it is placed, including tree, branches, or bushes, to avoid any undue strain or stress on the product conductors, connections, and wires. Cover the protective cap on the poles to avoid damaging the internal parts.
6. When not in use, store neatly in a cool, dry location protected from sunlight.



CAUTION: Use only the power adaptor that was provided with this product. Using a different power adaptor will damage the lights and cause fire, electrical shock hazard.

Troubleshooting

Problem	Solution
The tree does not light	Ensure that: i) tree sections are connected to each other securely; ii) Green Label Plug is connected to Adaptor securely, and iii) Adaptor is plugged into the wall outlet securely.

Create Your Twinkly Light Show

This tree is equipped with Twinkly RGB LED lights. Simply download the app, and add magic to your tree. For details, please see the **Twinkly Pre-lit Tree Instructions Guide.**