

IMPORTANT SAFETY INSTRUCTIONS

When using electrical products, basic precautions should always be followed including the following:

READ AND FOLLOW ALL SAFETY INSTRUCTIONS BEFORE USE

1. Do not use seasonal products outdoors unless marked suitable for indoor and outdoor use. When products are used in outdoor applications, connect the product to a Ground Fault Circuit Interrupting (GFCI) outlet. If one is not provided, contact a qualified electrician for proper installation.
2. This seasonal use product is not intended for permanent installation or use.
3. Do not mount or place near gas or electric heaters, fireplaces, candles or other similar sources of heat.
4. Do not secure the wiring of product with staples or nails, or place on sharp hooks or nails.
5. Do not let lamps rest on the supply cord or on any wire.
6. Unplug the product when leaving the house, when retiring for the night, or if left unattended.
7. This is an electric product-not a toy! To avoid risk of fire, burns, personal injury and electric shock it should not be played with or placed where small children can reach it.
8. Do not use this product for other than its intended use.
9. Do not hang ornaments or other objects from cord, wire or light string.
10. Do not close doors or windows on the product or extension cords as this may damage the wire insulation.
11. Do not cover the product with cloth, paper or any material not part of the product when in use.
12. This product is equipped with push-in type lamps. Do not twist lamps.
13. Read and follow all instructions that are on the product or provided with the product.

14. SAVE THESE INSTRUCTIONS

Use and Care Instructions

 
1. Before using or reusing, inspect product carefully. Discard any products that have cut, damaged, or frayed wire insulation or cords, cracks in the lamp holders or enclosures, loose connections or exposed copper wire.
2. When storing the product, carefully remove the product from wherever it is placed, including trees, branches, or bushes, to avoid any undue strain or stress on the product conductors, connections, and wires.

USER SERVICE INSTRUCTIONS


Lamp Replacement:

Step 1: Disconnect the unit from the outlet (During unplug, grasp the plug instead of pulling on the cord for protecting the cord from damage).

Step 2: Release locking tab, pull out the lamp (together with lamp based) from the lamp holder.



 
Step 3: Place a replacement lamp included in the product (3.6V/0.072W or 2.4V/0.048W LED type lamps) into the lamp holder and tab closed.



(Reference figure only)

In case of a new lamp base doesn't fit into the lamp holder, we might need to conduct a lamp base replacement. Please proceed with the following procedures,

 - Follow Step 1 and Step 2 (above mentioned)
- Remove the faulty lamp from the faulty lamp base.
- Thread thru the wires (2 wires out from a new lamp) onto the holes (2 holes inside a new lamp base) one by one.
- After this new lamp is being fully inserted, bend the wires to upright positions (please cross-reference with other lamps for details) in ensuring good contacts inside the lamp holder.

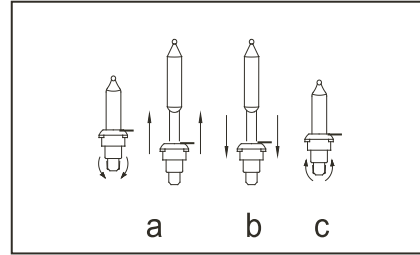

CAUTION:

 
To keep the risk of fire and electric shock to minimal,

- Only replace lamps with the spare parts provided with this product.
- Remove the faulty lamp gently and cautiously in avoiding breaking glass.
- Do not mount this light stings onto trees that are consisting of needles, leaves and/or branches that are fully or partially covered by metal.
- Make sure all wires are installed properly so that they are not being damaged by unintentional cuts or stretches over time.

HOW TO USE THE REMOTE CONTROLLER :

The remote control is for the wired controller only:

- REMOVE THE BATTERY LID AT THE BACK OF REMOTE CONTROL, INSTALL THE TWO AAA/UM4/LR03 BATTERIES(NOT INCLUDED) PROPERLY AS INDICATED ON THE BATTERY COMPARTMENT. MAKE SURE TO MATCH THE (+) AND (-) ENDS OF THE BATTERIES.**
- PRESS THE BUTTON TO SELECT DIFFERENT FUNCTIONS, REFER TO "HOW TO USE THE DUAL COLOR LIGHT CONTROLLER".**
- TO REPLACE THE BATTERY, OPEN THE BATTERY COMPARTMENT WITH A COIN. REPLACE WITH TWO AAA/UM4/LR03 BATTERIES.**
- DISPOSE USED BATTERY PROPERLY. OBSERVE LOCAL REGULATIONS REGARDING DISPOSAL OF HAZARDOUS WASTE.**
- ENSURE THE BATTERIES ARE INSTALLED CORRECTLY WITH REGARD TO POLARITY (+ AND -).**

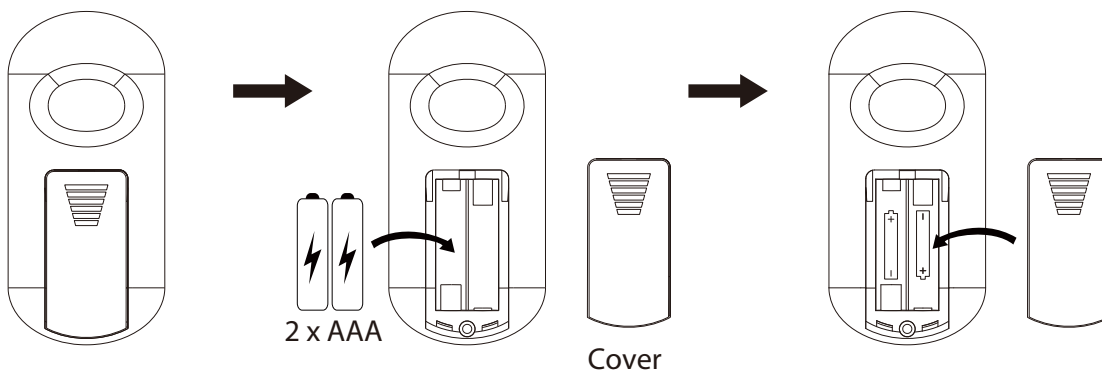

IMPORTANT SAFETY INSTRUCTIONS

- WARNING: SMALL PARTS, KEEP AWAY FROM CHILDREN.
- Do not expose light set to moisture.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (Carbon - Zinc), lithium, or rechargeable (NiCd, NiMH or other type) batteries.
- Remove batteries when not used for an extended period of time, or when depleted.
- Dispose of used batteries properly by following directions on batteries.
- Use only AAA-size (UM4/LR03) batteries for the remote controller.
- Clean the battery contacts prior to battery installation.
- DO NOT DISPOSE OF BATTERIES IN FIRE. BATTERIES MAY EXPLODE OR LEAK.