



6.5 ft UNLIT JACKSON TREE

Before You Begin


Please check to make sure you have the following parts

PART	DESCRIPTION	QUANTITY	PART	DESCRIPTION	QUANTITY
A	TREE - TOP	1	D	TREE STAND	1
B	TREE - CENTER, STICKER 2	1	E	SPARE PARTS PACKET	1
C	TREE - BOTTOM, STICKER 1	1			

Assembly / Operation Instructions

ASSEMBLING THE TREE STAND

- Step 1. Choose a location near a wall outlet.
 Step 2. Unfold the legs of the tree stand (D) and lay the stand on the floor.
 Step 3. Slide the locking disk of the tree stand (D) down until it snaps into place.

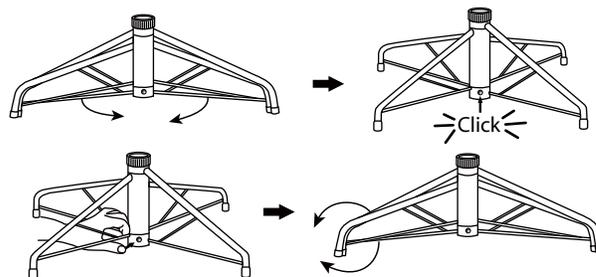

ASSEMBLING THE TREE

- Step 1. Remove the protective caps from the tree bottom and insert the pole into the tree stand.
 Step 2. Continue by inserting the upper tree section(s) to the lower section(s) until inserting the tree top.
 Step 3. Shape the branches to your preference by working from the bottom to the top. When adjusting branches, ensure that all wires are free of branch hinges.
 Step 4. Shape the tree from the bottom to the top. Start with the branches farthest from the pole – fan out in a star shape, and continue until the entire tree is shaped.

Top view



Side view




- Step 5. This is a Simple Shape® tree and no shaping is required. Just slightly upsweep and shift branches to fill in any gaps for a fuller, uniform look. Your Christmas tree is now ready to be decorated.

REPAIRING LOOSE HINGES

- Step 1. Place the branch into the slot of the bracket.
 Step 2. Insert a new hinge pin through the holes of the bracket and secure with a washer.



(FOR INDOOR USE ONLY)

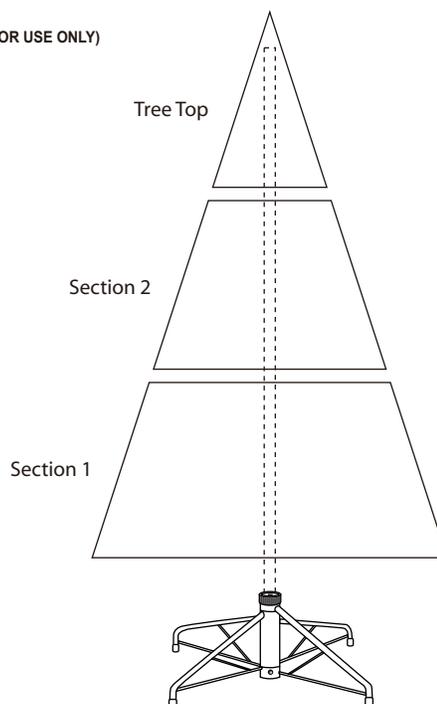

Storage / Maintenance Instructions

STORAGE INSTRUCTIONS

1. Before using or reusing, inspect product carefully. Discard any products that have cut, damaged or frayed wire insulation or cords, cracks in the lampholders or enclosures, loose connections, or exposed copper wire.
2. Before disassembling the tree, unplug the tree and remove all ornaments and decorations.
3. Gently lift the tree top straight up to remove from the center section and fold all branches towards the pole.
4. Repeat this step for the center and bottom tree sections.
5. When storing the product, carefully remove the product from wherever it is placed, including tree, branches, or bushes, to avoid any undue strain or stress on the product conductors, connections, and wires. Cover the protective cap on the poles to avoid damaging the internal parts.
6. When not in use, store neatly in a cool, dry location protected from sunlight.
7. Keep out of reach of pets and children.

MAINTENANCE

SPARE PARTS: This tree package includes hinge pins, washers.

If extra parts are needed, contact the Customer Service Team at 1-888-919-0070 between the hours of 8 am and 5 pm MST, Monday through Friday.