

材质: 300G双粉+双面印刷+过哑胶  
 颜色: C M Y K  
 尺寸: 787.5 mm x 210 mm

SIZE: 787.5 mm x 210 mm



For immediate help with assembly, product information, or to order replacement parts, call: 1-888-919-0070, email: warranty@polygroup.com (English, Spanish, French), (U.S. and Canada only), 10:00 am - 6:00 pm, Monday-Friday, Eastern Time, or go to www.polygroupstore.com.

5. IMPORTANT: PLACE SAFETY LOCK SWITCH TO LOCK POSITION
- To prevent accidental stowing of your tree when fully decorated.
  - When in lock position, both the foot pedal and remote control will not be able to Grow or Stow the tree.

**SHAPING YOUR GROW & STOW™ TREE**  
 Your Grow & Stow™ Tree is built and designed with Simple Shape® Memory Wire tips that are already pre-shaped at the factory. However, the first time you assemble your tree, it will require minimal shaping due to compression during shipping. In future seasons, the tree will retain much of the shaping from the previous season.

**STORING YOUR GROW & STOW™ TREE**

- PLACE SAFETY LOCK SWITCH ON UNLOCK POSITION
- USE EITHER REMOTE CONTROL OR FOOT PEDAL TO ACTIVATE THE STOW FUNCTION
  - Please make sure to remove all ornaments and decorations prior to using stow function.



- UNPLUG THE TREE AND PLACE ALL ACCESSORIES INTO PARTS BAG

7

- REMOVE TREE TOP AND PLACE IN TREE TOP BAG



- CLOSE PROTECTIVE CAP OVER TREE BASE POLE



- PULL STORAGE BAG OVER TREE BASE



8

- CINCH AND TIGHTEN DRAW STRINGS AND BUCKLE STRAPS



- UNLOCK WHEELS BEFORE STORING

 
- STORE IN COOL, DRY AREA WAY FROM SUNLIGHT
  - Exposing your tree to excessive heat or humidity may damage your tree.

**TROUBLESHOOTING**

**THE TREE LIGHTS DO NOT ILLUMINATE**

- Ensure that the power cord is plugged into a wall outlet. If the tree is plugged into a switch controlled wall outlet, make sure the switch is turned on.
- Check the remote for batteries and then try switching the remote off and on.
- Press the light button on the foot pedal.
- If the tree top does not light up, check that the Quick Set® tree top is securely set into the tree base. You may have to slightly turn or push down.
- If a section does not illuminate, unplug the power cord and check that section for loose or missing bulbs. Replace any missing or broken bulbs (replacement bulbs are included).

9

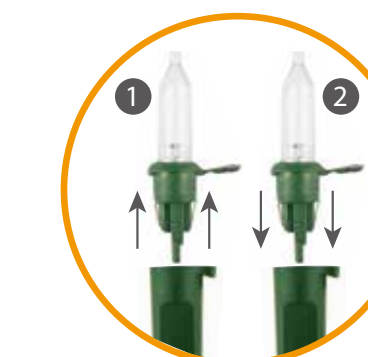

**THE GROW AND STOW FUNCTIONS DO NOT WORK**

- Check to make sure all wires are connected properly following setup instructions.
- Check lock switch on the foot pedal. Switch it to "UNLOCK" position.

 
**THE TREE DOES NOT LOOK STRAIGHT**

- Check to make sure the floor is level and that all four wheels are on the same surface.

**PRODUCT SPECIFICATIONS**

<b>Switching Power Supply (adaptor):</b>	Input AC100-240V, 50/60Hz, Output DC 29V/2A
<b>7.5ft Tree Grow Range (Vertical Stroke):</b>	Minimum: 6ft Maximum: 7.5ft Stroke: 1.5ft
<b>9ft Tree Grow Range (Vertical Stroke):</b>	Minimum: 7ft Maximum: 9ft Stroke: 2ft
<b>Tree Life Cycle:</b>	3000 Cycles Max.
<b>Remote Controller Range:</b>	33 ft (10m)
<b>Remote Controller Power:</b>	DC 3V
<b>Operational Temperature:</b>	0°C to 40°C, 85% Humidity, indoor use only
<b>Storage Temperature:</b>	-5°C to 60°C, 85% Humidity (and below)

10




**GROW & STOW™**  
**ASSEMBLY AND CARE INSTRUCTIONS**



Congratulations on purchasing your new Grow & Stow™ Tree from Polygroup®

SIZE: 787.5 mm x 210 mm

**GROW & STOW™ AT A GLANCE**

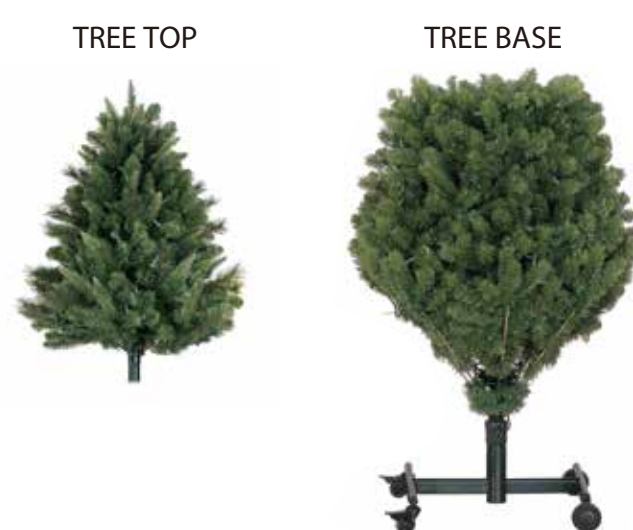 

**GROW & STOW™ INCLUDED ACCESSORIES**



1

**SETTING UP YOUR GROW & STOW™ TREE**

Please review these instructions carefully to help you set up your tree.

- REMOVE ALL PARTS FROM THE BOX
  - Tree base in storage bag.
  - Tree top in storage bag.
  - Parts bag containing remote control, foot pedal, power cord and adaptor, owners manual, and bulbs.
- WHEEL TREE BASE TO SET LOCATION
  - TIP - Place your tree on a level surface and in a clear area free of obstructions and near a wall outlet.



2

- REMOVE TREE PARTS FROM STORAGE BAG
- LOCK WHEELS ON TREE STAND



- OPEN PROTECTIVE CAP AT POLE CONNECTION



3

 
- ASSEMBLE TREE BY INSERTING THE TREE TOP INTO TREE BASE

- The tree is built with Quick Set® powered pole technology that automatically lights up the light strings when poles are connected.
- TIP - Make sure tree top is securely inserted into tree base. You may have to give it a slight turn.



- CONNECT WIRES INTO FOOT PEDAL AND POWER ADAPTOR

- Follow corresponding pin connectors to connect tree base to foot pedal.
- Connect to power adaptor and plug into wall socket.

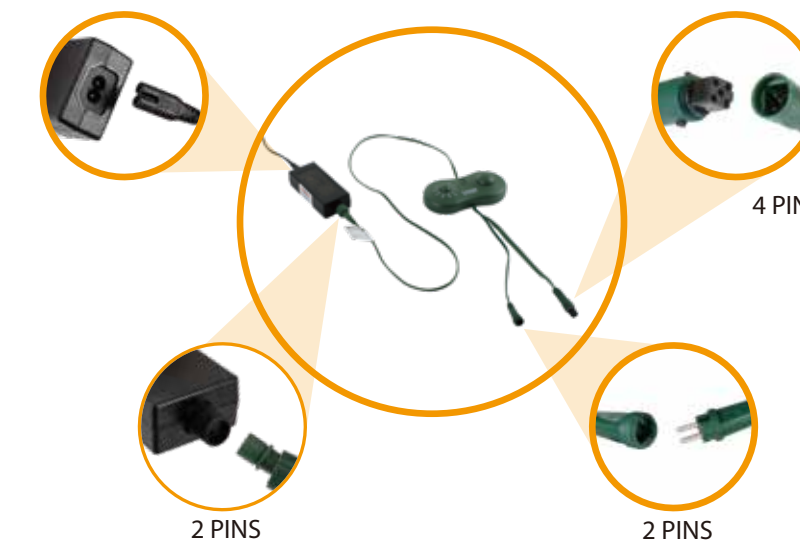


4

**OPERATING YOUR GROW & STOW™ TREE**

 Your Grow & Stow™ Tree can be operated using either the included foot pedal or remote control.

**FOOT PEDAL OPERATION**

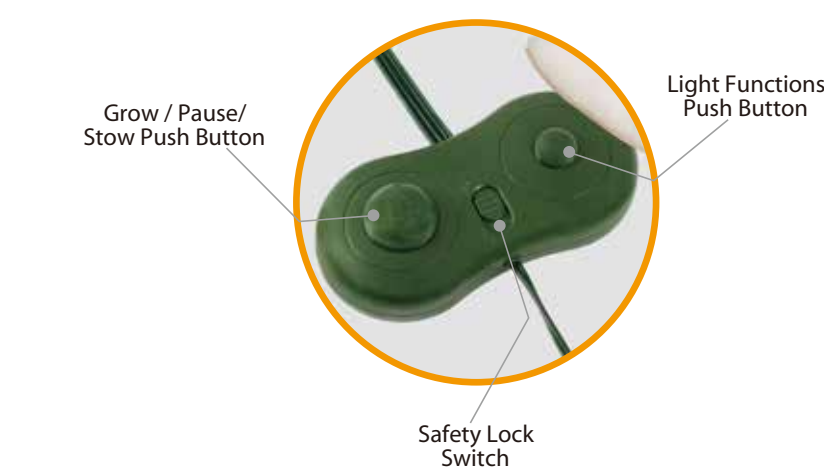

- PLACE SAFETY LOCK SWITCH TO UNLOCK POSITION
- PRESS THE TREE LOGO BUTTON TO START GROW FUNCTION
  - Press this button at any time to control height and toggle between Grow, Pause, or Stow function.
- PRESS THE LIGHT BUTTON TO TURN ON/OFF YOUR LIGHTS AND TO CONTROL LIGHT STRING EFFECTS \*
  - \*Only applicable to tree models with color changing LED lights.
- IMPORTANT: PLACE SAFETY LOCK SWITCH TO LOCK POSITION
  - To prevent accidental stowing of your tree when fully decorated.
  - When in lock position, both the foot pedal and remote control will not be able to Grow or Stow the tree.

5

**REMOTE CONTROL OPERATION**



- INSERT TWO AAA BATTERIES (NOT INCLUDED) INTO BATTERY COMPARTMENT
  - TIP - Make sure the safety lock switch located on the foot pedal is in the unlocked position.
- PRESS THE UP BUTTON TO START GROW FUNCTION
  - Press again to stop Grow function and pause at desired tree height.
- PRESS THE DOWN BUTTON TO START STOW FUNCTION
- PRESS THE LIGHT BUTTON TO TURN ON/OFF YOUR LIGHTS AND TO CONTROL LIGHT STRING EFFECTS \*
  - \*Only applicable to tree models with color changing LED lights.

6