

The supply cord cannot be replaced. If the cord is damaged the appliance should be scrapped.

Imported by: SERVICIOS HOME DEPOT, S. DE R.L. DE C.V.

Ricardo Margain 605. Santa Engracia, San Pedro Garza García, Nuevo León, México, C.P. 66267 Phone 01 800 004 6633

## Safety Information

# IMPORTANT SAFETY INSTRUCTIONS

When using electrical products, basic precautions should always be followed, including the following:

- a. **READ AND FOLLOW ALL SAFETY INSTRUCTIONS.**
- b. Do not use seasonal products outdoors unless marked suitable for indoor and outdoor use. When products are used in outdoor applications, connect the product to a Ground Fault Circuit Interrupting (GFCI) outlet. If one is not provided, contact a qualified electrician for proper installation.
- c. This seasonal product is not intended for permanent installation or use.
- d. Do not mount or place the product near gas or electric heaters, fireplaces, candles, or other similar sources of heat.
- e. Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails.
- f. Do not let lamps rest on the supply cord or on any wire.
- g. Unplug the product when leaving the house, when retiring for the night, or if left unattended.
- h. This is an electric product and not a toy! To avoid risk of fire, burns, personal injury and electric shock it should not be played with or placed where small children can reach it.
- i. Do not use this product for other than its intended use.
- j. Do not hang ornaments or other objects from cord, wire, or light string.
- k. Do not close doors or windows on the product or extensions cords as this may damage the wire insulation.
- l. Do not cover the product with cloth, paper, or any material that is not a part of the product when in use.
- m. This product has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not use with an extension cord unless plug can be fully inserted. Do not alter or replace the plug.
- n. This product is equipped with push-in type lamps. Do not twist lamps.
- o. This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Also unplug any additional strings or products that may be attached to the product. Replace the fuse as per the user servicing instructions (follow product marking for proper fuse rating) and check the product.

- p. Read and follow all instructions that are on the product or provide with the product.

## q. SAVE THESE INSTRUCTIONS

## Pre-Assembly

### Package Contents

Part	Description	Quantity
A	Tree top, tag 3	1
B	Tree center, tag 2	1
C	Tree bottom, tag 1	1
D	Tree stand	1


## Assembly

### Assembling the tree stand

**Step 1.** Choose a location near a wall outlet.

**Step 2.** Unfold the legs of the tree stand (D) and lay the stand on the floor.

**Step 3.** Slide the locking disk of the tree stand (D) down until it snaps into place.

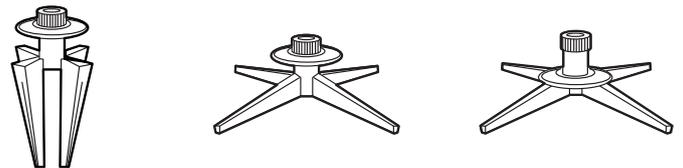

### Assembling the tree

**This tree assembles with Quick Set® technology ---Set up and light up your tree in less than 10 minutes!**

**Step 1.** Remove the protective caps from the tree bottom (C) and insert the pole into the tree stand (D).

**Step 2.** Remove the protective caps from the tree center (B) and insert the pole into the tree bottom (C).

**Step 3.** Insert the tree top (A) into the tree center (B).

**Step 4.** Shape the branches to your preference by working from the bottom to the top. When adjusting branches, ensure that all wires are free of branch hinges.

**Step 5.** Insert the green label extension cord plug into the wall outlet. All your lights should now be lit.


**Step 6.** When finished shaping the branches, slightly up-sweep all branch tips for a uniform look.

Top view



Side view



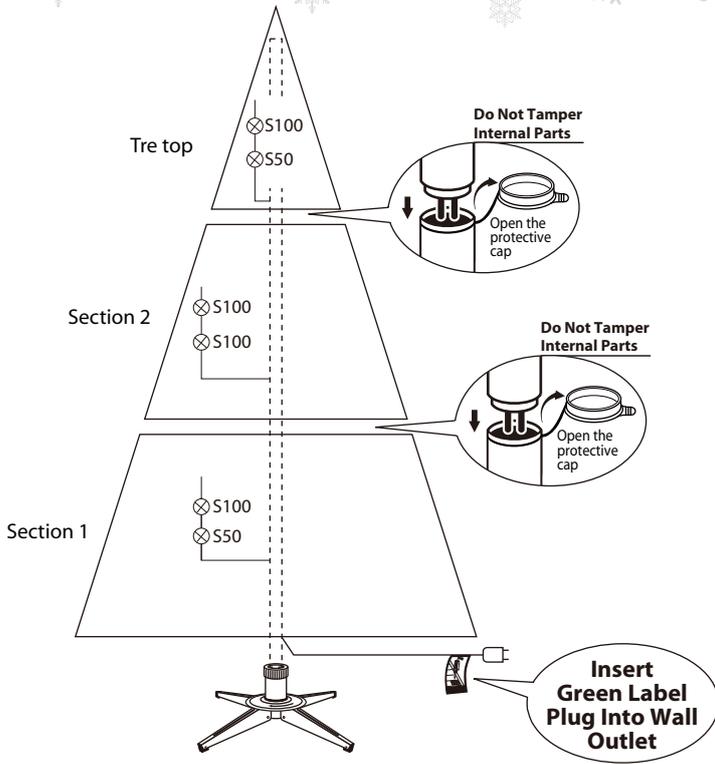

## Operation

### Turning on the tree

**NOTE:** If some bulbs do not light or flicker, search for any loose plugs and/or broken, loose, or missing bulbs. Replace bulbs promptly with the replacement bulbs provided in order to maintain the performance and life expectancy of your tree.

**Step 1.** Connect the light strings of the tree together and plug the power cord into a wall outlet.

**Step 2.** If the tree comes with a foot pedal, step on the On/Off button.

## Maintenance

### Spare parts

This tree package includes hinge pins, washers, bulbs, and fuses for any replacement or repair that you need to perform on your tree. If extra parts are needed, contact the Customer Service Team at 01 800 004 6633

### Repairing Loose Hinges

**Step 1.** Place the branch into the slot of the bracket.

**Step 2.** Insert a new hinge pin through the holes of the bracket and secure with a washer.

## Use and Care Instructions

- Before using or reusing, inspect product carefully. Discard any products that have cut, damaged or frayed wire insulation or cords, cracks in the lampholders or enclosures, loose connections, or exposed copper wire.
- Before disassembling the tree, unplug the tree and remove all ornaments and decorations.
- Gently lift the tree top straight up to remove from the center section and fold all branches towards the pole.
- Repeat this step for the center and bottom tree sections.

5. When storing the product, carefully remove the product from wherever it is placed, including tree, branches, or bushes, to avoid any undue strain or stress on the product conductors, connections, and wires. Cover the protective cap on the poles to avoid damaging the internal parts.

6. When not in use, store neatly in a cool, dry location protected from sunlight.


7. Keep out of reach of pets and children.



## User servicing instructions

### Fuse replacement

- Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on cord.
- Open fuse cover. Slide open fuse access cover on top of attachment plug towards blades.
- Remove fuse carefully.
- Risk of fire. Power cord replace fuse only with 5 Amp, 125 Volt.
- Close fuse cover. Slide closed the fuse access cover on top of attachment plug.
- Risk of fire. Do not replace attachment plug. Contains a safety device (fuse) that should not be removed. Discard product if the attachment plug is damaged.

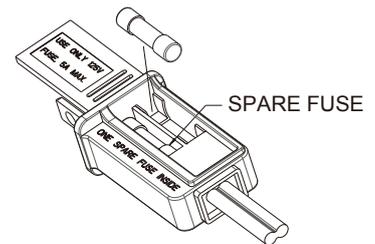

## Troubleshooting

Problem	Solution
The tree does not light	Ensure that all tree sections are plugged into each other and that the tree is plugged into the wall. If your tree came with a foot pedal, step on the On/Off button.
	Check for blown fuses at the light string and power cord plugs. Replace as needed with the replacement fuses provided.
	Check for loose, broken, or missing bulbs and replace as needed with the replacement bulbs provided

**NOTE:** The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction. Children should be supervised to ensure that they do not play with the appliance.

**CAUTION** and in essence the following: To reduce risk of fire and electric shock: Disconnect the decorative item from the power source before performing any maintenance or cleaning.

For indoor use only .

Do not utilize the decorative item outdoors.