

Electrical ratings: 120 V~60 Hz 122.4 W

Wesley Tree
Model: TG76M5412C03; 131194

The supply cord cannot be replaced. If the cord is damaged the appliance should be scrapped.

Imported by: SERVICIOS HOME DEPOT, S. DE R.L. DE C.V.
Ricardo Margain 605. Santa Engracia, San Pedro Garza García,
Nuevo León, México, C.P. 66267 Phone 01 800 004 6633

Safety Information

IMPORTANT SAFETY INSTRUCTIONS

When using electrical products, basic precautions should always be followed, including the following:

a. READ AND FOLLOW ALL SAFETY INSTRUCTIONS.

- b. This product is for indoor use only. The electrical rating is 120 V~60 Hz 122.4 W.
- c. This seasonal product is not intended for permanent installation or use.
- d. Do not mount or place the product near gas or electric heaters, fireplaces, candles, or other similar sources of heat.
- e. Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails.
- f. Do not let lamps rest on the supply cord or on any wire.
- g. Unplug the product when leaving the house, when retiring for the night, or if left unattended.
- h. This is an electric product and not a toy! To avoid risk of fire, burns, personal injury and electric shock it should not be played with or placed where small children can reach it.
- i. Do not use this product for other than its intended use.
- j. Do not hang ornaments or other objects from cord, wire, or light string.
- k. Do not close doors or windows on the product or extensions cords as this may damage the wire insulation.
- l. Do not cover the product with cloth, paper, or any material that is not a part of the product when in use.
- m. Read and follow all instructions that are on the product or provided with the product.

n. SAVE THESE INSTRUCTIONS

Pre-Assembly


Package Contents

Part	Description	Quantity
A	Tree top, tag 3	1
B	Tree center, tag 2	1
C	Tree bottom, tag 1	1
D	Tree stand	1

Assembly


Assembling the tree stand

- Step 1.** Choose a location near a wall outlet.
- Step 2.** Unfold the legs of the tree stand (D) and lay the stand on the floor.
- Step 3.** Slide the locking disk of the tree stand (D) down until it snaps into place.

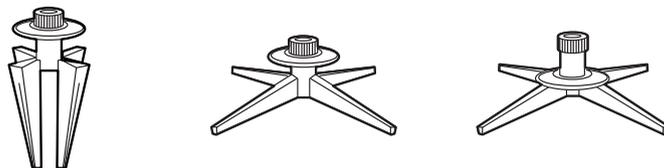

Assembling the tree

- Step 1.** Remove the protective caps from the tree bottom and insert the pole into the tree stand.
- Step 2.** Continue by inserting the upper tree section(s) to the lower section(s) until inserting the tree top.
- Step 3.** Shape the branches to your preference by working from the bottom to the top. When adjusting branches, ensure that all wires are free of branch hinges.
- Step 4.** Connect the light strings as per the color labels indicated in attached photo and insert green label plug into the wall outlet.
- Step 5.** When finished shaping the branches, slightly upsweep all branch tips for a uniform look.

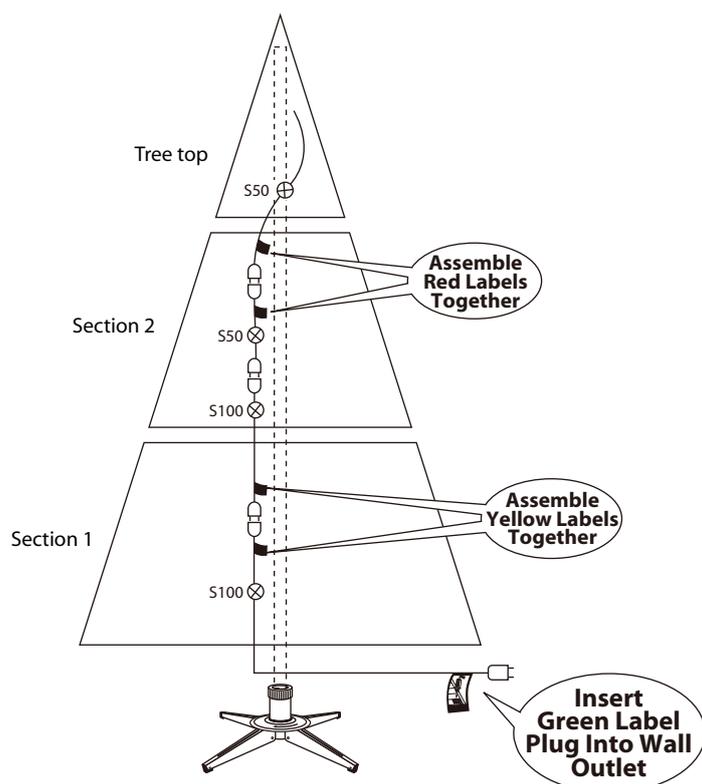

Operation

Turning on the tree

NOTE: If some bulbs do not light or flicker, search for any loose plugs and/or broken, loose, or missing bulbs. Replace bulbs promptly with the replacement bulbs provided in order to maintain the performance and life expectancy of your tree.

Step 1. Connect the light strings of the tree together and plug the power cord into a wall outlet.

Step 2. If the tree comes with a foot pedal, step on the On/Off button.

Maintenance

Spare parts

This tree package includes hinge pins, washers, bulbs, and fuses for any replacement or repair that you need to perform on your tree. If extra parts are needed, contact the Customer Service Team at 01 800 004 6633

Repairing Loose Hinges

Step 1. Place the branch into the slot of the bracket.

Step 2. Insert a new hinge pin through the holes of the bracket and secure with a washer.

Care and Cleaning

Step 1. Remove all ornaments and decorations.

Step 2. Unplug the cord from the wall and then unplug each section of the tree.

Step 3. Gently lift the tree top straight up to remove from the center section and fold all branches towards the pole.

Step 4. Repeat this step for the bottom tree section.

Step 5. Carefully place all tree sections into a shipping box and tape it shut.

Step 6. Store your tree in a cool, dry place away from sunlight.

Step 7. Keep out of reach of pets and children.

Children must be supervised to ensure that the items are not used as toys.

CAUTION and in essence the following: To reduce risk of fire and electric shock:

CAUTION and in essence the following: To reduce risk of fire and electric shock: Disconnect the decorative item from the power source before performing any maintenance or cleaning.

Do not install nor place near gas equipment or electric heaters, chimneys, candles or other similar heat sources.

Disconnect the product when leaving the house, going to sleep or if left unattended.

Do not hang ornaments or other objects to the cord, cable or lighting chain.

Do not cover the decorative item with cloth, paper or any other material that is not part of the product when in use.


Do not install the chain in a manner that may cut or damage the wire insulation.

For indoor use only.

User servicing instructions

Fuse replacement

- a) Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on cord.
- b) Open fuse cover. Slide open fuse access cover on top of attachment plug towards blades.
- c) Remove fuse carefully.
- d) Risk of fire. Power cord replace fuse only with 3 Amp, 125 volt.
- e) Close fuse cover. Slide closed the fuse access cover on top of attachment plug.
- f) Risk of fire. Do not replace attachment plug. Contains a safety device (fuse) that should not be removed. Discard product if the attachment plug is damaged.
- g) Unplug the item before replacing the fuse.

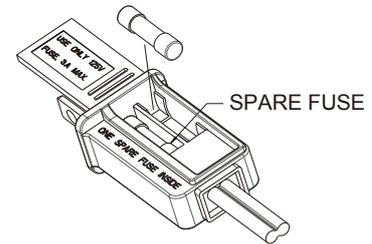

Troubleshooting

Problem	Solution
The tree does not light	Ensure that all tree sections are plugged into each other and that the tree is plugged into the wall. If your tree came with a foot pedal, step on the On/Off button.
	Check for blown fuses at the light string and power cord plugs. Replace as needed with the replacement fuses provided.
	Check for loose, broken, or missing bulbs and replace as needed with the replacement bulbs provided