



**NEED HELP?**

DO NOT RETURN TO STORE. Call: 1-877-527-0313  
 Form 8am to 5pm EST, Monday through Friday.

**Safety Information**

**IMPORTANT SAFETY INSTRUCTIONS**

When using electrical products, basic precautions should always be followed, including the following:

- a. **READ AND FOLLOW ALL SAFETY INSTRUCTIONS.**
- b. Do not use seasonal products outdoors unless marked suitable for indoor and outdoor use. When products are used in outdoor applications, connect the product to a Ground Fault Circuit Interrupting (GFCI) outlet. If one is not provided, contact a qualified electrician for proper installation.
- c. This seasonal product is not intended for permanent installation or use.
- d. Do not mount or place the product near gas or electric heaters, fireplaces, candles, or other similar sources of heat.
- e. Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails.
- f. Do not let lamps rest on the supply cord or on any wire.
- g. Unplug the product when leaving the house, when retiring for the night, or if left unattended.
- h. This is an electric product and not a toy! To avoid risk of fire, burns, personal injury and electric shock it should not be played with or placed where small children can reach it.
- i. Do not use this product for other than its intended use.
- j. Do not hang ornaments or other objects from cord, wire, or light string.
- k. Do not close doors or windows on the product or extensions cords as this may damage the wire insulation.
- l. Do not cover the product with cloth, paper, or any material that is not a part of the product when in use.
- m. This product is equipped with push-in type lamps. Do not twist lamps.
- n. Read and follow all instructions that are on the product or provide with the product.
- o. **SAVE THESE INSTRUCTIONS**

**Pre-Assembly**

**Package Contents**

Part	Description	Quantity
A	Tree top	1
B	Tree center, Sticker 8	1
C	Tree center, Sticker 7	1
D	Tree center, Sticker 6	1
E	Tree center, Sticker 5	1
F	Tree center, Sticker 4	1
G	Tree center, Sticker 3	1
H	Tree center, Sticker 2	1
I	Tree center, Sticker 1	1
J	Tree stand	1

**Assembly**

**Assembling the tree stand**

Tree Stand Part List		
No.	Name	Qty
1	Bottom Cross Frame	1 PC
2	Horizontal Connection Frame	4 PCS
3	Vertical Connection Tube	4 PCS
4	"L" Shape Vertical Tube	4 PCS
5	Tube For Hooking Branches	1 PC
6	Top Cross Flame	1 PC
7	Bolt - Spec M8*16mm	8 PCS
8	Bolt - Spec M8*50mm	8 PCS
9	Nut - Spec M8	8 PCS
10	Triangle Bolt - Spec M6*18mm	6 PCS

Choose a location near a wall outlet, begin to assemble the tree.

Follow below steps:

**Step 1.** Connect part 1 to 2, then screw part 7 (Bolt).


**Step 2.** Connect part 2 to 3, then screw part 8 (Bolt)

**Step 3.** Insert tree section 9 (I) to bottom cross frame (J), and then insert tree section 8 (H) to section 9 (I), section 7 (G) to section 8 (H), then section 6 (F) to section 7 (G).

**Step 4.** Connect part 3 to part 4, then screw part 7 (Bolt).

**Step 5.** Connect part 4 to part 6, then screw part 8 (Bolt).

**Caution:** to avoid over current, please connect lighting string according to the strings layout for the tree. (see diagram below)

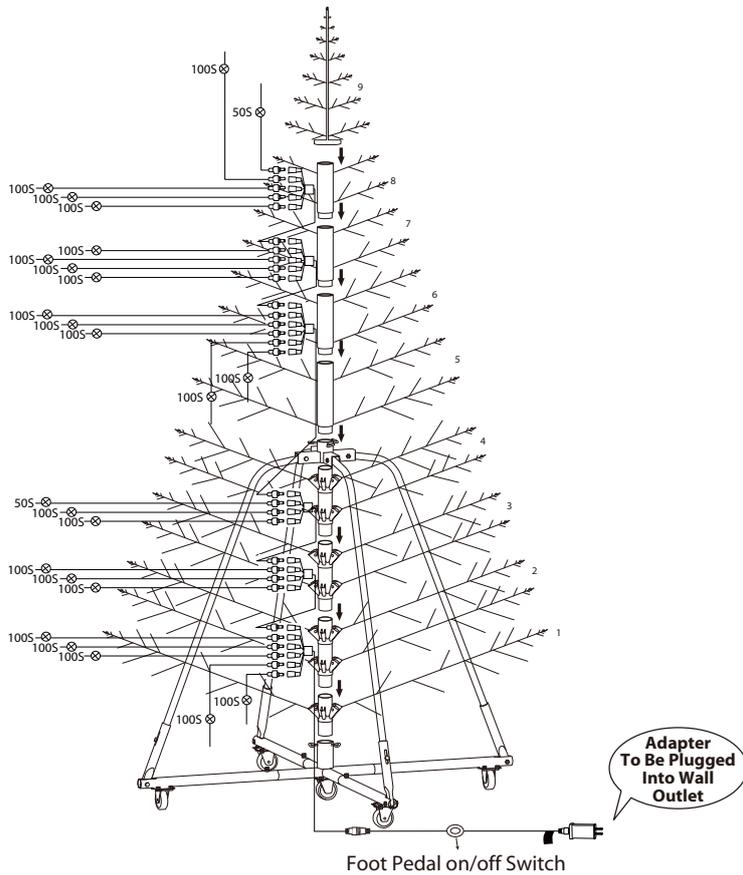

## Assembling the tree

**Step 1.** Remove the protective caps, and insert the section 5 (E) into the section 6 (F).

**Step 2.** Insert the section 4 (D) into the section 5 (E), and insert the section 5 (E) into the section 6 (F),

**Step 3.** Insert the section 2 (B) into the section 3 (C), insert the tree top (A) into the section 2 (B).


**Step 4.** Shape the branches to your preference by working from the bottom to the top. When adjusting branches, ensure that all wires are free of branch hinges.

**Step 5.** Connect the plug(s) securely to the extension cord(s) as per the color labels indicated in attached photo and insert the green label extension cord plug into the wall outlet.

**Step 6.** Shape the tree from the bottom to the top. Start with the branches farthest from the pole – fan out in a star shape, and continue until the entire tree is shaped.



**Step 7.** When finished shaping the branches, slightly upswEEP all branch tips for a uniform look.

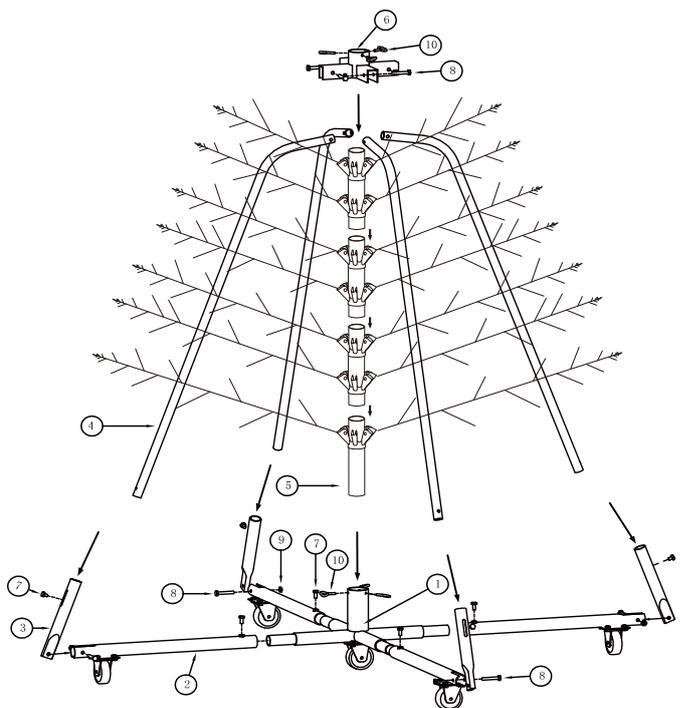

### LAMP REPLACEMENT

**Step 1.** Grasp the power adapter or power cord plug, and than unplug from the power outlet. Do not pull the power cord.

**Step 2.** Lift up lamp lock tab, then pull the lamp and plastic lamp base straight out of the lamp-holder.



**Step 3.** Replace with a new spare lamp provided with this product.



(Reference figure only)

### Care and Cleaning

- Step 1.** Remove all ornaments and decorations.
- Step 2.** Unplug the cord from the wall and then unplug each section of the tree.
- Step 3.** Gently lift the tree top straight up to remove from the center sections and fold all branches towards the pole.
- Step 4.** Repeat this step for the bottom tree section.
- Step 5.** Carefully place all tree sections into a shipping box and tape it shut.
- Step 6.** Store your tree in a cool, dry place away from sunlight.
- Step 7.** Keep out of reach of pets and children.

### Operation

#### Turning on the tree

**NOTE:** If some bulbs do not light or flicker, search for any loose plugs and/or broken, loose, or missing bulbs. Replace bulbs promptly with the replacement bulbs provided in order to maintain the performance and life expectancy of your tree.

**Step 1.** Connect the light strings of the tree together and plug the adapter into a wall outlet.

**Step 2.** If the tree comes with a foot pedal, step on the On/Off button.

### Troubleshooting

Problem	Solution
The tree does not light	Ensure that all tree sections are plugged into each other and that the tree is plugged into the wall. If your tree came with a foot pedal, step on the On/Off button.
	Check for loose, broken, or missing bulbs and replace as needed with the replacement bulbs provided

### Maintenance

#### Spare parts

This tree package includes hinge pins, washers and bulbs for any replacement or repair that you need to perform on your tree. If extra parts are needed, contact the Customer Service Team at 1-877-527-0313 between the hours of 8 am and 5 pm EST, Monday through Friday.

#### Repairing Loose Hinges

**Step 1.** Place the branch into the slot of the bracket.

**Step 2.** Insert a new hinge pin through the holes of the bracket and secure with a washer.

**CAUTION:** Use only power adapter that was provided with this product. Using a different power adapter will damage the lights and cause fire, electrical shock hazard.