

NEED HELP?

DO NOT RETURN TO STORE. PLEASE VISIT US AT:
www.polygroupstore.com OR 1-888-919-0070




TREE ASSEMBLY INSTRUCTIONS

Thank you for purchasing your new tree from **Polygroup®**!


This tree comes with Quick Set® technology - allowing you to set up your tree and light it up in minutes!
Carefully follow the instructions below on how to set up your tree quickly and easily.

1. Before you start assembling your tree, choose an appropriate location near a wall outlet.
2. Assemble the tree stand and place on a level surface. **(See Fig. A)**

Fig. A - Tree Stand Assembly

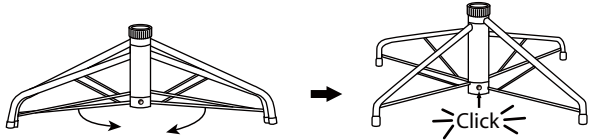


Pull apart the legs of the stand so that they are snapped into an x-shape. Place the tree stand on a level surface.

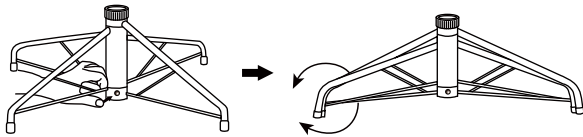

To close the stand, press the metal button and fold the legs together.

Fig. B - Tree and Lights Assembly

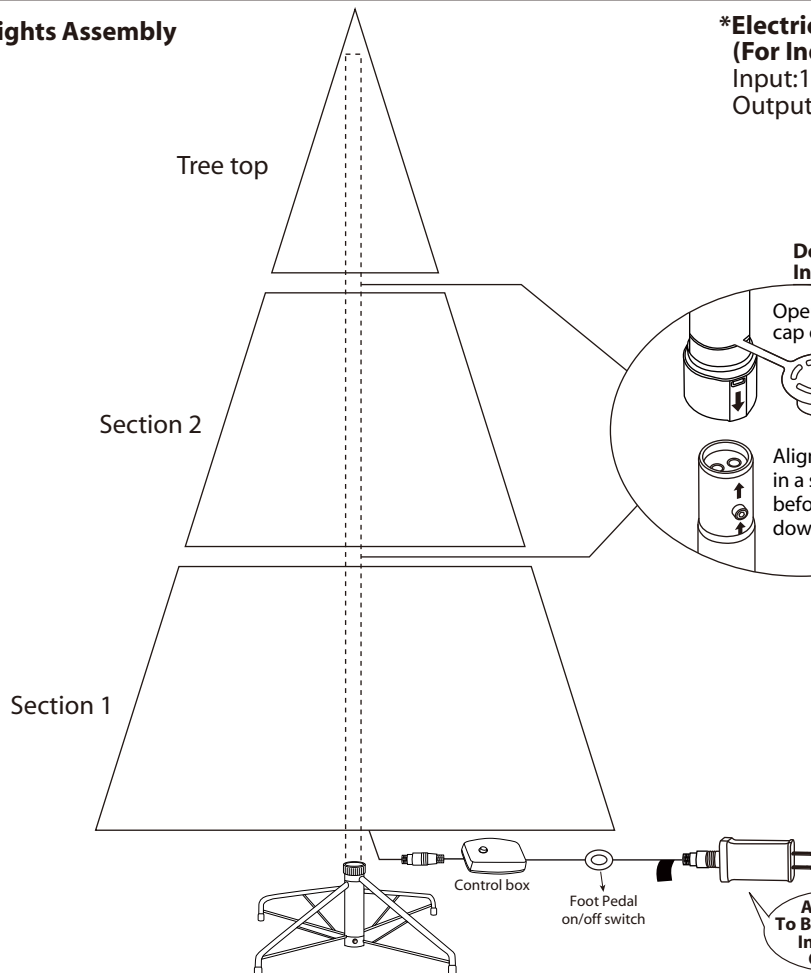

***Electrical Rating For The Tree
(For Indoor Use Only)**

Input: 120 V AC, 60 Hz, 0.38 A
Output: 29 V DC 0.621 A

**Do Not Tamper
Internal Parts**


Open the
cap cover

Align both arrows
in a straight line
before sliding
down to insert

**Adapter
To Be Plugged
Into Wall
Outlet**

3. Each tree section is numbered with a sticker. Please identify all sections before assembling.
4. Assemble the tree from bottom to the top. Start with the bottom section by inserting it into the assembled stand. Make sure the pole is firmly inserted and secured.
5. Remove the protective cap of upper sections before inserting lower sections. Follow the direction of the arrow marked on the adapter to insert.
6. Allow branches to fall into place or gently pull up and out. When adjusting the branches, be sure that all wires are free of branch hinges.
7. Just plug the adapter (connecting with the tree power cord) into the wall outlet. **(See Fig. B)** Your entire tree should now be lit. If some bulbs flicker or do not turn on, search for any loose plugs and/or broken, loose or missing bulbs. Replace bulbs promptly in order to maintain the performance and life expectancy of your pre-lit tree.


- Begin to shape the branches and tips working from the bottom to the top. Start with tips furthest from the pole and fan out from the side before moving towards the middle of the branch. **(See Fig. C)**

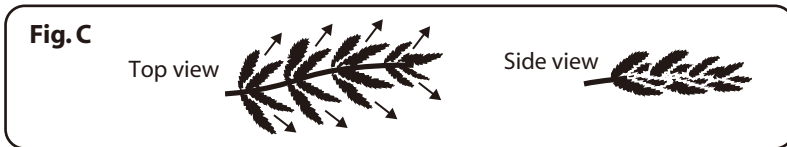

- This is a Simple Shape® tree and no shaping is required. After you finish shaping the tree, slightly upsweep all branch tips for a uniform look. Shift branches to fill any gaps. Your Christmas tree is now complete and ready to be decorated.

STORAGE INSTRUCTIONS

- Unplug adapter from the wall outlet first before removing all ornaments and decorations.
- Disassemble the tree from the top to the bottom. Start with the tree top and gently lift straight up to detach from section below. Fold all branches toward the pole.
- Continue by gently lifting straight up each section(s) from the section below and fold all branches toward the pole until the bottom section is removed from the tree stand. Cover the protective cap on the poles to avoid damaging the internal parts. **(See Fig. D)**
- Carefully place all tree sections into shipping box and tape it shut.
- When not in use, please store your tree in a cool, dry place away from sunlight. Exposing your tree to excessive heat or humidity may damage your tree.

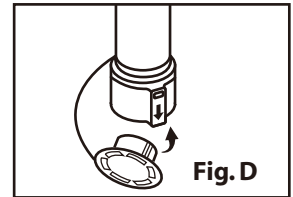


TROUBLESHOOTING TIPS

For pre-lit trees, if the tree does not illuminate

- Please check to make sure that all plugs are properly connected and adapter is plugged into the wall outlet. (If the tree comes with a foot pedal, try stepping on the on/off button).
- Turn the poles gently to make sure pole to pole are connected into place.
- Check for loose connection between light string plugs and extension cords.
- Please check for loose, broken or missing light bulbs and replace as needed.

Loose hinge pins

- Extra hinge pins are included for repairing the hinges. Place the branch into the slot of the bracket.
- Insert a new hinge pin through the hole and secure using the retainer washer. **(See Fig. E)**

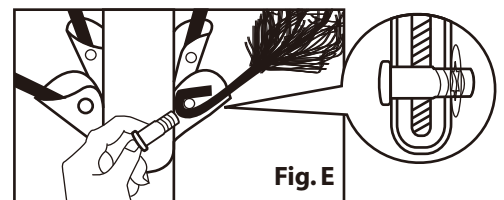


SPARE PARTS

Each tree includes hinge pins/washers, and for pre-lit trees spare bulbs are also included. If extra parts are needed, please contact our customer service center.

REMOTE CONTROL INSTRUCTIONS


- Remove the insulation tab.
- Press either selector button and wait for a second to enjoy light effects in the following sequence (see **DUAL COLOR LIGHT CONTROLLER & REMOTE CONTROL**).

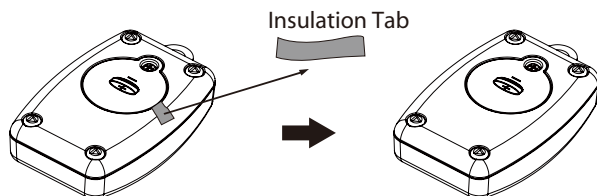

DUAL COLOR LIGHT CONTROLLER & REMOTE CONTROL


Simply press the selector button to select from the following light functions: Press the selector button on the "Dual Color Light Controller" or "Remote Controller" to select among:

- CLEAR - MULTI: FADING**
- CLEAR: FADING**
- CLEAR - MULTI: ALTERNATING**
- CLEAR: STEADY**
- CLEAR - MULTI: SLOW FADING**
- MULTI: STEADY**
- MULTI: FADING**
- COMBINATION**

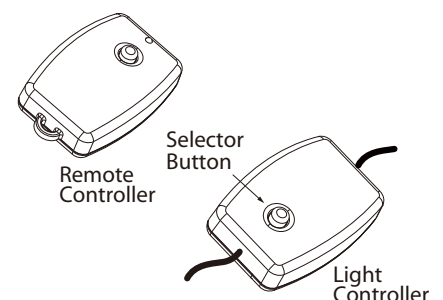


BATTERY REPLACEMENT

1. Loosen the screw of the battery cover with a screwdriver (not included).

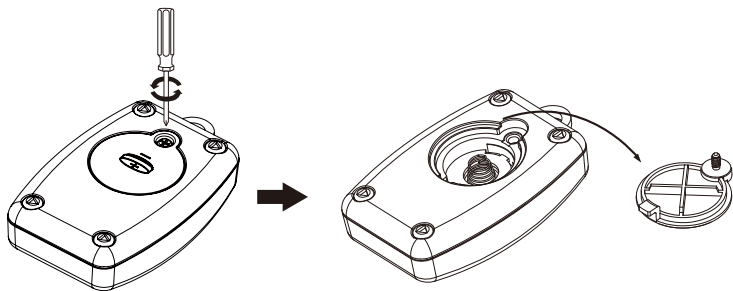

2. Replace the used battery with a new CR2032 button cell battery (not included). Make sure that the battery is installed with the correct polarity (+ and -).

3. Retighten the screw to close and secure the battery cover.

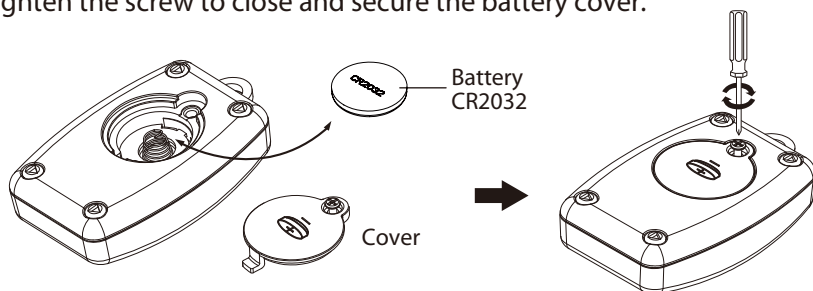

⚠ WARNING

1. Dispose used battery properly. observe local regulations regarding disposal of hazardous waste.
2. Ensure the batteries are installed correctly with regard to polarity (+ and -).
3. This product is powered by a lithium battery. Due to their small size, lithium batteries can easily be swallowed by children. Ingestion of such batteries has been known to cause death.
4. Do not expose light set to moisture.
5. Remove batteries when not used for an extended period of time, or when depleted.
6. Clean the battery contacts prior to battery installation.
7. The external flexible cable or cord of this luminaire cannot be replaced; If the cord is damaged, the luminaire shall be destroyed.
8. Dispose of used batteries properly.
9. Use only CR2032 batteries for the remote controller.
10. DO NOT DISPOSE OF BATTERIES IN FIRE. BATTERIES MAY EXPLODE OR LEAK.

CAUTION:

1. To reduce the risk of fire and electric shock:
 - a) Use only the power supply that was provided with this product;
 - b) Do not install on trees having needles, leaves or branch covering of metal or materials which look like metal;
 - c) Do not mount or support strings in a manner that can cut or damage wire insulation.
2. Use only the adapter supplied with this product. Using a different adapter will damage the lights and may cause fire, or electrical shock hazards.

CUSTOMER SERVICE FOR CHRISTMAS TREES

For any questions, assistance, or missing parts, **Do Not Return To Place Of Purchase.** Please contact us at 1-888-919-0070 or visit our website at www.polygroupstore.com. One of our customer service representatives will be happy to assist you.

Tree ID#: _____

Customer Name: _____

Tree UPC#: _____

Address(No P.O. Boxes): _____

Store Purchased: _____

City & State: _____

Specify Problem: _____

Zip Code: _____

Day Phone: _____

Date Purchased: _____

TREE ID# IS LOCATED ON END PANEL OF BOX. TREE ID# IS REQUIRED WHEN REQUESTING REPLACEMENT PARTS.