



Operation

Turning on the tree

NOTE: If some bulbs do not light or flicker, search for any loose plugs and/or provided in order to maintain the performance and life expectancy of your tree.

Step 1. Connect the light strings of the tree together and plug the adapter into a wall outlet.

Step 2. If the tree comes with a foot pedal, step on the On/Off button.

Maintenance

Spare parts

This tree package includes hinge pins, washers for any replacement or repair that you need to perform on your tree. If extra parts are needed, contact the Customer Service Team at 1-877-527-0313 between the hours of 8 am and 5 pm EST, Monday through Friday.

Repairing Loose Hinges

Step 1. Place the branch into the slot of the bracket.

Step 2. Insert a new hinge pin through the holes of the bracket and secure with a washer.

Care and Cleaning

Step 1. Remove all ornaments and decorations.

Step 2. Unplug the cord from the wall and then unplug each section of the tree.

Step 3. Gently lift the tree top straight up to remove from the center section and fold all branches towards the pole.

Step 4. Repeat this step for the bottom tree section.

Step 5. Carefully place all tree sections into a shipping box and tape it shut.

Step 6. Store your tree in a cool, dry place away from sunlight.

CAUTION: Use only power adapter that was provided with this product. Using a different power adapter will damage the lights and cause fire, electrical shock hazard.

Troubleshooting

Problem	Solution
The tree does not light	Ensure that all tree sections are plugged into each other and that the tree is plugged into the wall. If your tree came with a foot pedal, step on the On/Off button.