

## IMPORTANT SAFETY INSTRUCTIONS

When using electrical products, basic precautions should always be followed including the following:

- a). **READ AND FOLLOW ALL SAFETY INSTRUCTIONS.**
- b). Do not use seasonal products outdoors unless marked suitable for indoor and outdoor use. When products are used in outdoor applications, connect the product to a Ground Fault Circuit Interrupting (GFCI) outlet. If one is not provided, contact a qualified electrician for proper installation.
- c). This seasonal use product is not intended for permanent installation or use.
- d). Do not mount or place near gas or electric heaters, fireplaces, candles or other similar sources of heat.
- e). Do not secure the wiring of product with staples or nails, or place on sharp hooks or nails.
- f). Do not let lamps rest on the supply cord or on any wire.
- g). Unplug the product when leaving the house, when retiring for the night, or if left unattended.
- h). This is an electric product - not a toy! To avoid risk of fire, burns, personal injury and electric shock it should not be played with or placed where small children can reach it.
- i). Do not use this product for other than its intended use.
- j). Do not hang ornaments or other objects from cord, wire, or light string.
- k). Do not close doors or windows on the product or extension cords as this may damage the wire insulation.
- l). Do not cover the product with cloth, paper or any material not part of the product when in use.
- m). This product has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not use with an extension cord unless plug can be fully inserted. Do not alter or replace the plug.
- n). This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Also unplug any additional strings or products that may be attached to the product. Replace the fuse as per the user servicing instructions (follow product marking for proper fuse rating) and check the product. If the replacement fuse blows, a short-circuit may be present and the product should be discarded.
- o). Read and follow all instructions that are on the product or provided with the product.
- p). **SAVE THESE INSTRUCTIONS.**

## Use and care instructions

- a). Before using or reusing, inspect product carefully. Discard any products that have cut, damaged, or frayed wire insulation or cords, cracks in the lampholders or enclosures, loose connections, or exposed copper wire.
- b). When storing the product, carefully remove the product from wherever it is placed, including tree, branches, or bushes, to avoid any undue strain or stress on the product conductors, connections, and wires.
- c). When not in use, store neatly in a cool, dry location protected from sunlight.

## Each rotating tree stand includes the following:

- 1pc extra fuse attached with the product
- 1pc 1" tree pole adaptor
- 1pc 1.25" tree pole adaptor
- 1pc 1.5" tree pole adaptor
- 1pc 1.75" tree pole adaptor

If extra parts are needed, contact the Customer Service Team at 1-877-527-0313 between the hours of 8 am and 5 pm EST, Monday through Friday.

## User servicing instructions

Replace the fuse.

- a). Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on cord.
- b). Open fuse holder by unscrewing the cap and remove the burnt fuse (fig. A).
- c). Remove fuse carefully.
- d). Risk of fire. Replace fuse only with 8 amp, 250 volt fuse.
- e). Insert the fuse into fuse holder and screw back the fuse holder tightly. (fig. B).

Model NO.PP8880

