

## 3' PRE-LIT TREE

model no. 151-2737-6 | Toll-free number: 1-866-827-4985


**IMPORTANT:** Please read this manual carefully before assembly and save it for reference.

### TREE ASSEMBLY INSTRUCTIONS

Carefully follow the instructions below to quickly and easily set up your new tree.


1. Before you start to assemble your tree, choose an appropriate location near a wall outlet.
2. Assemble the tree stand and place on a level surface. (See Fig. A.)

**Fig. A - Tree Stand Assembly**

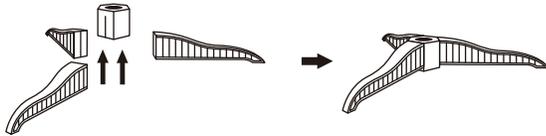

Insert and slide the legs upward into the slots of the base until firmly secured.

**Fig. B - Tree and Light Assembly**

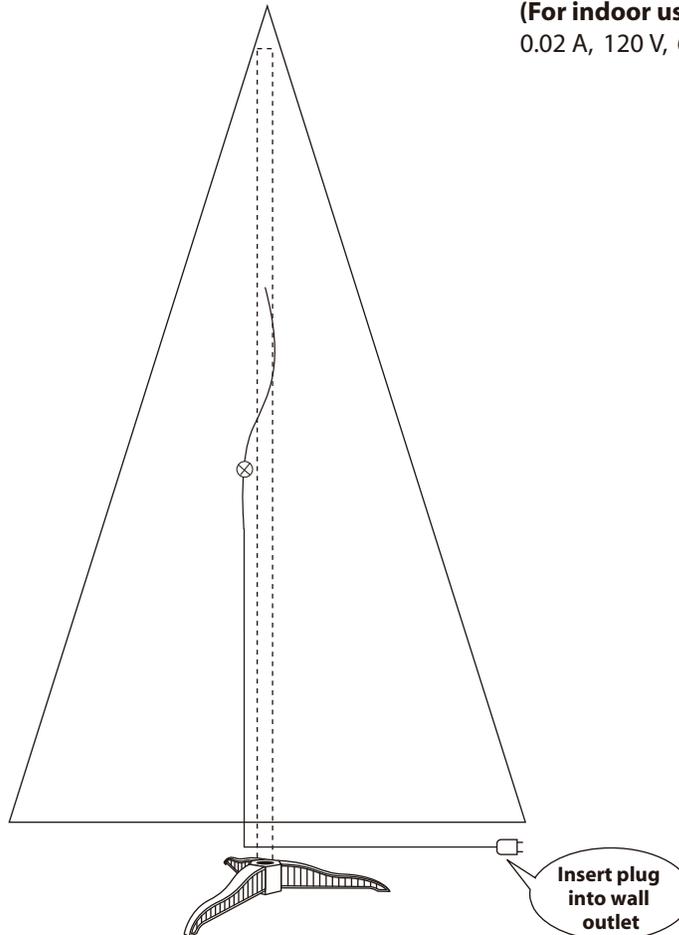

**\*Electrical rating for the tree  
(For indoor use only)**  
0.02 A, 120 V, 60 Hz

3. Carefully insert the tree body into the assembled stand. Make sure the pole is firmly inserted into stand.
4. Shape the branches. Shift branches to fill any gaps, lightly upsweep all branch tips for a uniform look. Your tree is now ready to decorate.
5. Plug the cord into wall outlet.

## STORAGE INSTRUCTIONS

1. Unplug light string from the wall outlet and remove all ornaments and decorations.
2. Gently lift the tree body up from the tree stand.
3. Carefully place the tree stand and tree into shipping box and tape it shut.
4. When not in use, please store your tree in a cool, dry place away from sunlight. Exposing your tree to excessive heat or humidity may damage your tree.
5. Keep out of reach of pets and children.

### For pre-lit trees, if the tree does not illuminate


1. Please check to make sure that all plugs are properly connected according to the colour labels indicated in and that the power cord is plugged into the wall outlet. Refer to assembly guide for instructions.
2. Please check for loose, broken or missing light bulbs and replace as needed.

### Replace the fuse.

- Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on the cord.
- Open fuse cover. Slide the fuse access cover on top of attachment plug toward blades.
- Remove fuse carefully.
- Risk of fire. Replace fuse with only a 3 Amp, 125 volt fuse (provided in the replacement bag).
- Close fuse cover. Slide the fuse access cover on top of attachment plug away from the blades.

**CAUTION:** Risk of fire. Do not replace attachment plug.

Do not remove the safety device (fuse). Discard product if the attachment plug is damaged.

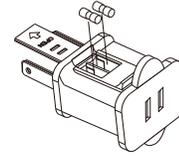

## SPARE PARTS

Each tree includes hinge pins/washers, and for pre-lit trees, spare bulbs and fuses are also included. If extra parts are needed, please contact our customer service centre.

### 1-YEAR WARRANTY ON TREE

This product carries a one (1) year warranty against defects in workmanship and materials of the tree. Noma Canada agrees to replace a defective product within the stated warranty period. The defective product will need to be returned to the place of purchase along with proof of purchase. This product is not guaranteed against wear or breakage due to misuse and/or abuse.

### 3-YEAR LIMITED WARRANTY ON LIGHTS

This product carries a three (3) year warranty against defects in workmanship and materials of the lights. Noma Canada agrees to replace a defective product within the stated warranty period. The defective product will need to be returned to the place of purchase along with proof of purchase. This limited warranty is not valid if the product is found to have been consumer altered, damaged or abused, used for commercial purposes, or if the damage is caused by accident, acts of nature, consumer neglect, failure to follow proper installation procedures or vandalism.

