

# LUMATIONS® COLOR BLAST™

## REMOTE CONTROLLED LED LIGHTS LARGE ICICLE LED LIGHTS

### READ AND KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE

FAILURE TO FOLLOW THESE WARNINGS AND INSTRUCTIONS CAN RESULT IN SERIOUS INJURY OR DEATH TO USERS, ESPECIALLY CHILDREN.

### WARRANTY

Thank you for your purchase of Polygroup® products! We do hope that you are happy with what you received, but we know sometimes it's necessary to exchange or return an item. Therefore, Polygroup® offers a 90-day limited warranty on this product.

We are happy to repair your defective item or replace it with an item that is equal to the purchase price of the item, given that:

- You are the original purchaser for products purchased directly from an authorized retailer or wholesaler of Polygroup® products;
- The item was purchased within the last 90 days;
- The item was purchased during its intended season;
- Proof of purchase can be provided, and
- The item is in its original packaging.

If you meet these requirements, please contact us at (email) [warranty@polygroup.com](mailto:warranty@polygroup.com) or (phone) **1-888-919-0070** so that we may forward you a quality assurance form.

- \* **Note:** Warranty is not extended to items that are purchased from seasonal stores as they generally sell items with an "all sales final" policy. Warranty is also not extended to close-out, second quality, or resold products (i.e. garage sales, online auctions, or online retailers not purchased directly from Polygroup®). Any issues with items purchased from these types of vendors/sellers will need to be addressed through them.

## **WARNING**

### IMPORTANT SAFETY INSTRUCTIONS

When using electrical products, basic precautions should always be followed including the following:

#### READ AND FOLLOW ALL SAFETY INSTRUCTIONS.

1. Do not use seasonal products outdoors unless marked suitable for indoor and outdoor use. When used outdoors, this product must be connected to a Ground Fault Circuit Interrupting (GFCI) outlet. If one is not provided, contact a qualified electrician for proper installation.
2. This seasonal use product is not intended for permanent installation or use.
3. Do not mount or place near gas or electric heaters, fireplace, candles or other similar source of heat.
4. Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails.
5. Do not let lamps rest on the supply cord or on any wire.
6. Disconnect the product from power source when leaving the house, when retiring for the night, or if left unattended.
7. This is an electric product - not a toy! To avoid risk of fire, burns, personal injury and electric shock, it should not be played or placed where small children can reach it.
8. Do not use this product for other than its intended use.
9. Do not hang ornaments or other objects from cord, wire, or light string.
10. Do not close doors or windows on the product or extension cords as this may damage the wire insulation.
11. Do not cover the product with cloth, paper or any materials not part of the product when in use.
12. This product can be used by children ages 8 years and above, and people with reduced physical, sensory or mental capabilities, if they have been given the right supervision or instructions concerning the use of the product in a safe way and understand the hazards involved. Children should not play with the product. Cleaning and user maintenance should not be made by children without supervision.
13. Risk of fire: the supply cord, adapter, plugs and/or connectors cannot be replaced or modified. If either is damaged, the product should be scrapped.
14. Strobe lights have been known to trigger seizures in people with photosensitive epilepsy.
15. Read and follow all instructions that are on the product or provided with the product.

#### SAVE THESE INSTRUCTIONS.

#### CAUTION:

1. To reduce the risk of fire or electric shock:
  - Do not install on trees having needles, leaves or branches covering of metal or materials which look like metal;
  - Do not mount or support cords or cables in a manner that can cut or damage wire insulation;
  - Do not attempt to replace lamps or modify string;
  - Use only the adapter provided with this product;
  - This product does not contain lamp shunts, which allow the product to operate if one lamp burns out.

2. Make sure connectors are fully inserted and any connector rings are twisted until completely secured such that the rings can no longer be turned and the two portions of the connectors are completely assembled.
3. The lighting string is rated 1 Watts (0.04 Amps). Do not overload. Connect other COLOR BLAST™ remote controlled LED lights end-to-end up to a maximum of 26 Watts (1.08 Amps) total. To avoid the risk of fire or personal injury, do not exceed the maximum allowable electrical load.

Large Icicle LED lights

Rated Wattage: 1 W (0.04 A), Total Wattage: 1.3 Watts

Maximum Wattage Capacity: 26 W (1.08 A)

#### AC Adapter

Input: AC120 V / 60 Hz, 0.45 A


Output: DC 24 V, 1.08 A

## USE & CARE INSTRUCTIONS


1. When the product is placed on a live tree, the tree should be well maintained and fresh. Do not place on live trees in which the needles are brown or break off easily. Keep the tree holder filled with water. This item may be omitted if the product is not intended for placement on a tree or next to a tree.
2. If the product is placed on a tree, the tree should be well secured and stable. This item may be omitted if the product is not intended for placement on a tree or next to a tree.
3. Before using or reusing, inspect product carefully. Discard any products that have cut, damaged, or frayed wire insulation or cords, cracks in the lampholders or enclosures, loose connections, or exposed copper wire.
4. When storing the product, carefully remove the product from wherever it is placed, including trees, branches, or bushes, to avoid any undue strain or stress on the product conductors, connections, and wires.
5. When not in use, store neatly in a cool, dry location protected from sunlight.

## SETUP INSTRUCTIONS

1. Understand your product.

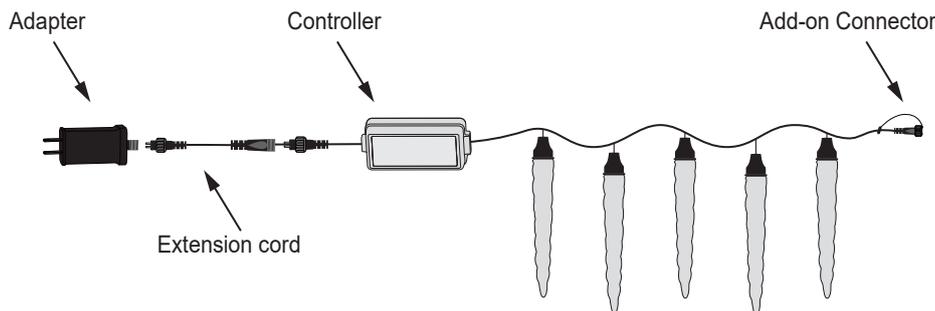

2. Hang the product at your desired spot and plug it in to the wall outlet.

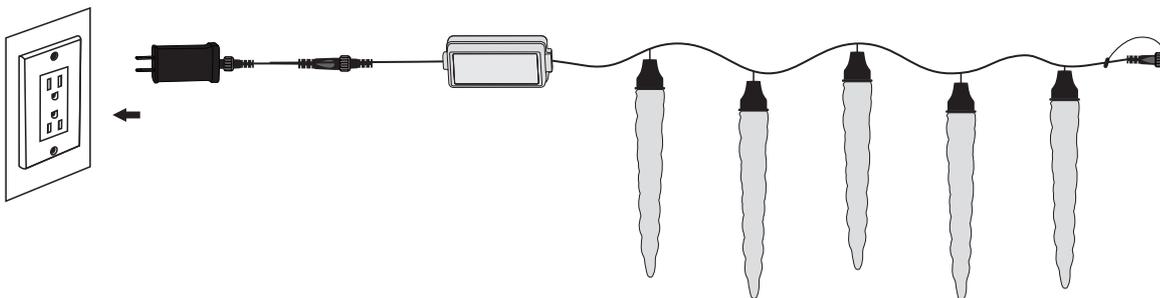

## MULTIPLE STRINGS SETUP INSTRUCTIONS

#### Mix-and-Match within the same series for Extra Fun!

This product is connectable with other Color Blast™ LED Lights. Simply calculate the Rated Wattage of all connected products and create your own light show.

1. Check the rated wattage of each light string to be connected.
2. Add up the rated wattage of all light strings.
3. Total rated wattage of all light strings should not exceed 26 W (the maximum wattage capacity of adapter).

#### Example:

- Rated Wattage of Product A: 1 W
- Rated Wattage of Product B: 2.2 W
- Rated Wattage of Product C: 2.9 W

#### Then a feasible connection can be:


$$A \times 9 + B \times 5 + C \times 2 =$$

$$(1 \text{ W} \times 9) + (2.2 \text{ W} \times 5) + (2.9 \text{ W} \times 2) =$$


$$9 \text{ W} + 11 \text{ W} + 5.8 \text{ W} = 25.8 \text{ W} \text{ ( less than 26 W )}$$

## MULTIPLE STRINGS SETUP INSTRUCTIONS

1. Locate the extension cord of the first kit.

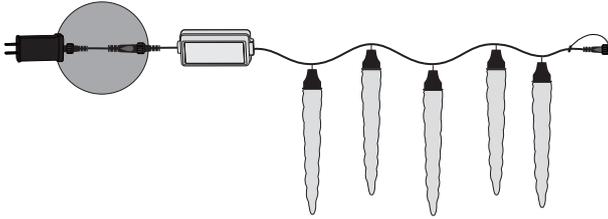


 2. Unlock the lock nut, and pull apart the plugs to reveal the male connector.




\* You can use or remove the extension cord as you need


3. Save the power adapter for future use.

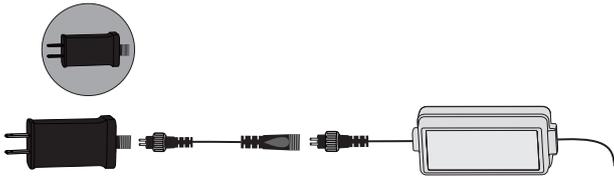


4. Take the second kit out from the box.

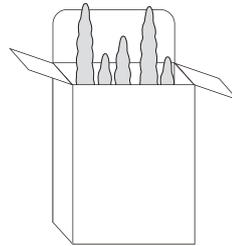


5. Locate the add-on connector of the second kit. Open the protective cap to reveal the female connector.

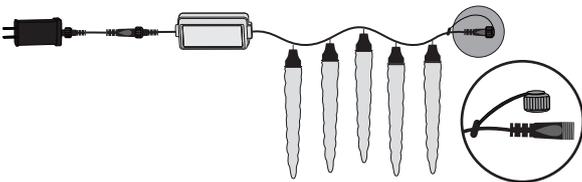

6. Connect the two kits together. Tighten the lock nut to secure the connection.

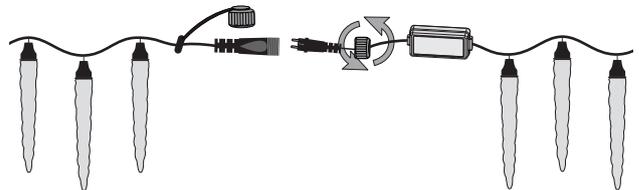

7. Hang the product in a horizontal or vertical orientation at your desired spot.

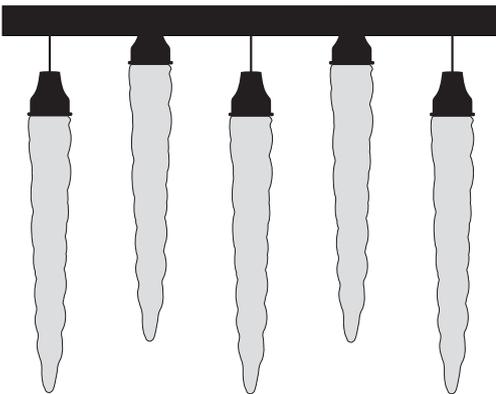

8. Plug it in to the wall outlet.




9. For best signal quality/reception, make sure the controller is placed on a raised area free of obstacles.



**TIP: Simply use the remote control to enjoy the color spectacle. Please see REMOTE CONTROL INSTRUCTIONS.**

# REMOTE CONTROL INSTRUCTIONS

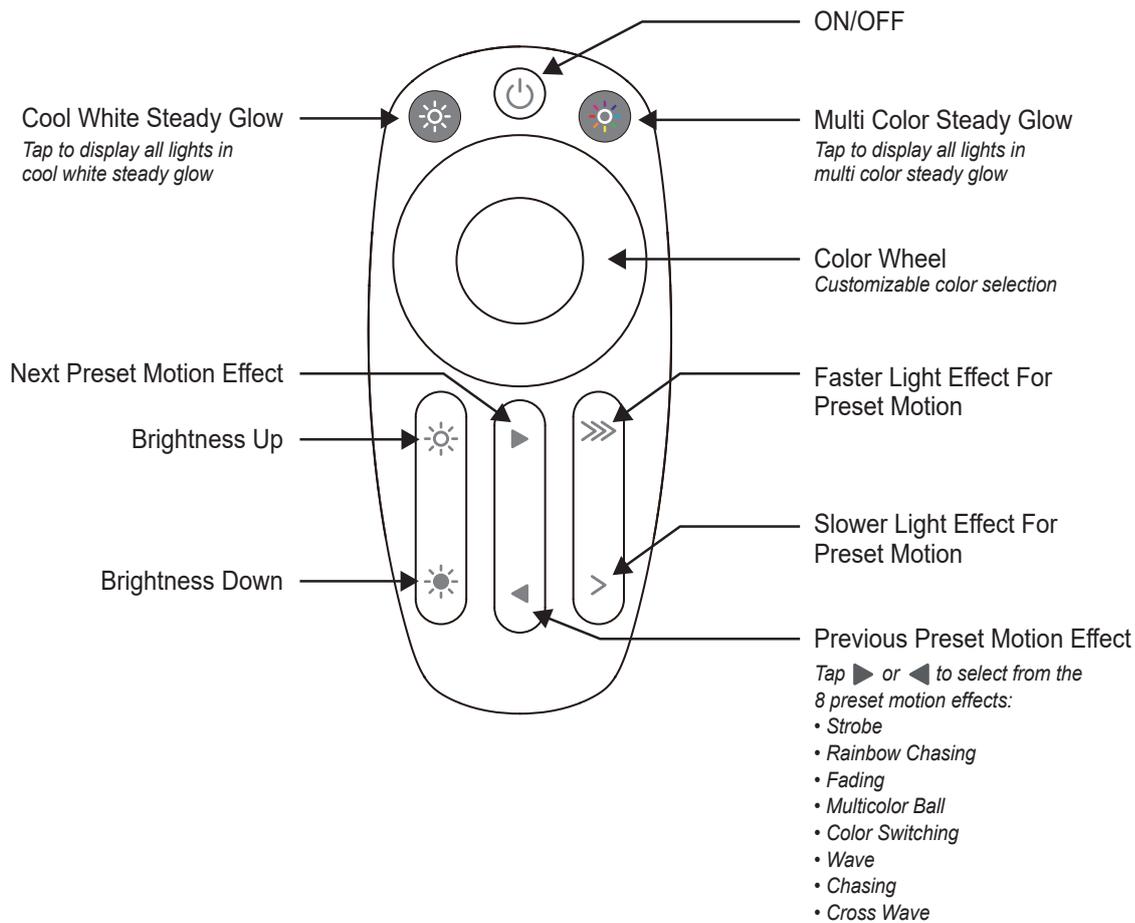


## Battery Replacement

1. Slide open the battery cover.
2. Replace with a new CR2032 button cell battery with correct polarities (+/-) as indicated.
3. Slide the battery cover closed.

### ⚠ WARNING

1. This product is powered by a lithium battery. Due to their small size, lithium batteries can easily be swallowed by children. Ingestion of such batteries has been known to cause death.
2. SMALL PARTS, KEEP AWAY FROM CHILDREN.
3. Do not expose the product to moisture.
4. Remove batteries when not used for an extended period of time, or when depleted.
5. Dispose of used batteries properly.
6. Use only CR2032 batteries for the remote controller.
7. Clean the battery contact surfaces gently prior to battery installation.
8. DO NOT DISPOSE OF BATTERIES IN FIRE. BATTERIES MAY EXPLODE OR LEAK.

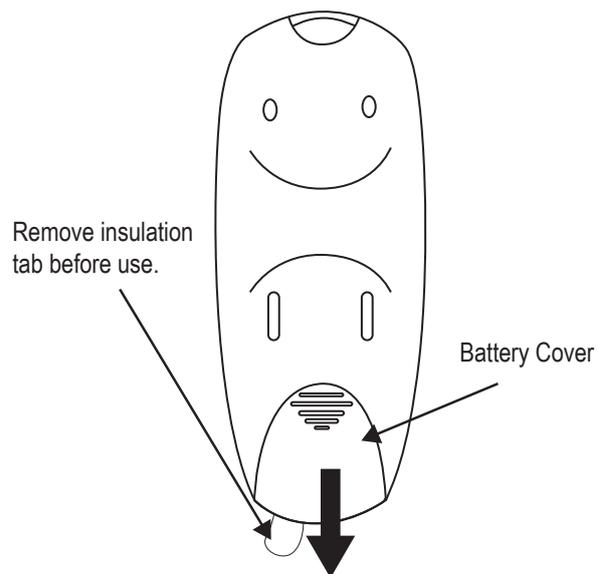

**WARNING:** This product may potentially trigger seizures for people with photosensitive epilepsy when using the motion effect light modes.