

model no. 051-3472-6 & 151-5700-4 & 151-5701-2 & 151-1789-8 & 051-3475-0

IMPORTANT: Please read this manual carefully before assembly and save it for reference

## INSERTING THE BATTERIES

1. Locate battery compartment on the product.
2. Remove compartment cover by unscrewing it with a screwdriver.
3. Insert 3 AA batteries as indicated in diagram below. Make sure the batteries are inserted in the correct direction and polarity.
4. Replace compartment cover, re-insert screws and tighten, and the lights will turn on. If they do not immediately turn on, press the on/off button.
5. BATTERIES ARE NOT INCLUDED.
6. Dispose of used batteries as per municipal or provincial law.

FIG.1



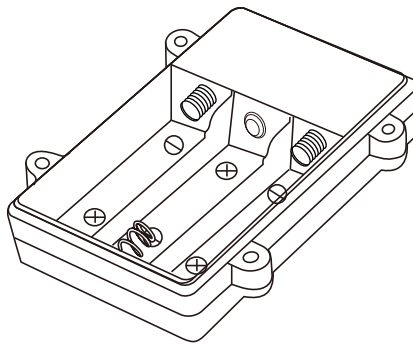


FIG.2

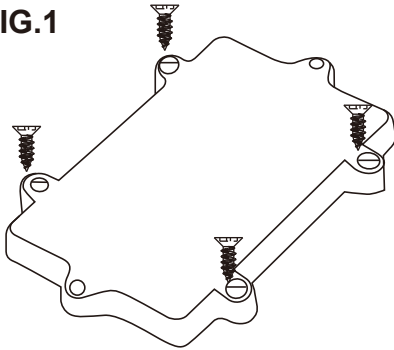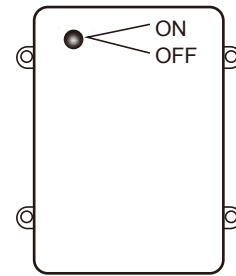

## USER SERVICE INSTRUCTIONS

### Lamp Replacement

**Step 1.** Lift up bulb lock tab, then pull the bulb and plastic bulb base straight out of the bulb holder.



**Step 2.** Replace with a new spare bulb provided with this product.



(For reference only)

## OPERATING INSTRUCTIONS

This battery-operated control box comes with a pre-set timer function.

1. When you press on, the lights will automatically come on and stay lit for 6 hours.
2. The lights will automatically turn off after the 6 hours and remain off for 18 hours. This cycle will then continue until you press off.

## WARNING

1. Small parts, keep away from children.
2. Do not expose light set to moisture.
3. Do not mix alkaline, standard (zinc-carbon), lithium, or rechargeable (NiCd, NiMH or other type) batteries
4. Remove batteries when not used for an extended period of time, or when depleted.
5. Clean the battery contacts prior to battery installation.
6. Caution - when replacing the batteries, you must only replace with AA alkaline-type batteries.
7. Do not mix old and new batteries (or different types of batteries).
8. For indoor and outdoor use.
9. Dispose of all drained batteries properly.
10. Do not dispose of batteries in fire. Batteries may explode or leak.
11. Keep out of reach of pets and children.

This product carries a one (1) year warranty against defects in workmanship and materials. Noma Canada agrees to replace a defective product, within the stated warranty period, when returned to the place of purchase with proof of purchase. This product is not guaranteed against wear or breakage due to misuse and/or abuse.

Made in China  
Imported by  
Noma Canada, Toronto, Canada M4S 2B8

N° de modèle : 051-3472-6 et 151-5700-4 et 151-5701-2 et 151-1789-8 et 051-3475-0

**IMPORTANT :** Veuillez lire attentivement le présent guide avant l'assemblage et le conserver aux fins de consultation ultérieure.

## INSERTION DES PILES

1. Repérer le compartiment à piles sur l'appareil.
2. Retirer le couvercle du compartiment en le dévissant avec un tournevis.
3. Insérer trois piles AA tel qu'indiqué dans le diagramme ci-dessous. Assurez-vous que les piles sont insérées dans la bonne direction avec la bonne polarité.
4. Replacer le couvercle du compartiment, réinsérer les vis et les serrer, puis les lumières s'allumeront. Si elles ne s'allument pas immédiatement, appuyer sur le bouton marche / arrêt.
5. LES PILES NE SONT PAS INCLUSES.
6. Jeter les piles usagées conformément aux lois municipales ou provinciales.

FIG.1



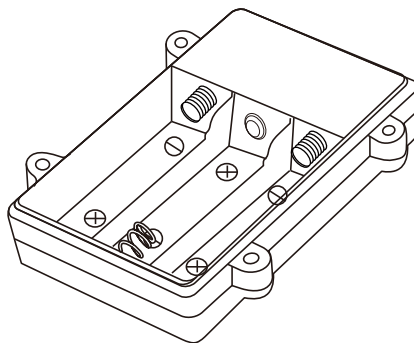


FIG.2

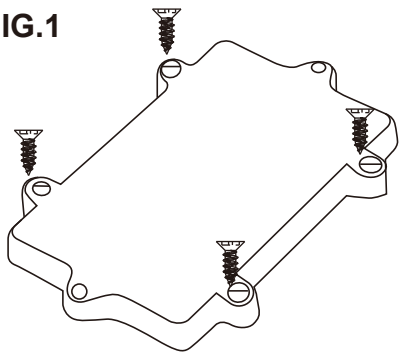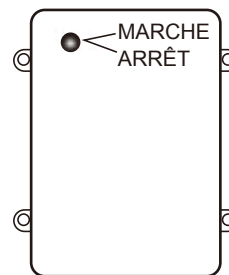

## INSTRUCTIONS D'ENTRETIEN PAR L'UTILISATEUR

### REPLACEMENT D'UNE AMPOULE

**Étape 1.** Soulevez la languette de verrouillage de l'ampoule, retirez à la fois l'ampoule et le culot en plastique hors du support d'ampoule.



**Étape 2.** Remplacez-la par la nouvelle ampoule de rechange fournie avec cet article.



(À titre de référence seulement)

## INSTRUCTIONS D'UTILISATION

Ce boîtier de commande à piles est muni d'une minuterie pré-réglée.

1. Quand vous appuyez sur le bouton MARCHE, les lumières s'allument automatiquement, et elles resteront allumées pendant 6 heures.
2. Les lumières s'éteindront automatiquement après 6 heures et resteront éteintes pendant 18 heures. Ce cycle se poursuivra jusqu'au moment où vous appuierez sur le bouton ARRÊT.

## AVERTISSEMENT

1. Petites pièces, garder hors de la portée des enfants.
2. Ne pas exposer les ampoules à l'humidité.
3. Ne combinez pas des piles alcalines, standard (carbène-zinc), au lithium ou rechargeables (Ni-Cd, NiMH ou autres) dans un même appareil.
4. Retirez les piles lorsque vous n'utilisez pas l'article pendant une période prolongée ou lorsqu'elles sont épuisées.
5. Nettoyez les bornes des piles avant de les installer.
6. Mise en garde - pour remplacer les piles, n'utilisez que des piles alcalines de type AA.
7. Ne mélangez pas les piles neuves et usagées (ni les piles de types différents).
8. S'utilise à l'intérieur comme à l'extérieur.
9. Mettez les piles déchargées au rebut correctement.
10. Ne pas jeter les piles dans un feu. Les piles peuvent exploser ou fuir.
11. Tenir hors de la portée des animaux de compagnie et des enfants.

Cet article comprend une garantie d'un (1) an contre les défauts de fabrication et de matériaux. Noma Canada consent à remplacer l'article défectueux lorsqu'il est retourné à l'endroit de l'achat, accompagné de la preuve d'achat, au cours de la période de garantie convenue. Cet article n'est pas garanti contre l'usure ni le bris causés par un usage abusif ou inapproprié.

Fabriqué en Chine

Importé par

Noma Canada, Toronto, Canada M4S 2B8